

EZT-7104

7" mITX 主板
USER' Manual V10

USER'S MANUAL 用户手册

声明

本使用说明书内容如有变更，恕不另行通知。本公司并不对本使用说明书之适用性，适合做某种特殊用途之使用或其他任何事项做任何明示，或做其他形式之保证或担保。因此本公司将不对手册内容之错误，或因增减展示或以其他方式使用本手册所造成之直接，间接，突发性过、或继发性之损害负任何责任。

版权声明：

版权所有----深圳智锐通科技有限公司。未经本公司许可或依著作权法之规定许准，不得复制，节录和翻译使用说明书之任何内容。

安全须知

1	产品使用前，务必仔细阅读产品说明书。
2	对未准备安装的板卡，应将其保存在防静电保护袋中。
3	在从包装袋中拿板卡前，应将手先置于接地金属物体上一会儿，以释放身体及手中的静电。
4	在拿板卡时，需佩带静电保护手套，并且应该养成只触及边缘部份的习惯。
5	主板与电源连接时，请确认电源电压。
6	为避免人本被电击或产品被损坏，在每次对主板、板卡进行拔插或生新配置时须先关闭交流电源或将交流电源线从电源插座中拔掉。
7	在对板卡进行搬动前，先将交流电源线从电源插座中拔掉。
8	当您需连接或拔除任何设备前，须确定所有的电源线事先已被拔掉。
9	为避免频繁开关机对产品造成不必要的损伤,关机后,应至少等待30秒后再开机。
10	设备在使用过程时出现异常情况，请找专业人员处理。

目录

第一章 产品介绍.....	7
1.1 产品规格.....	7
1.2 功能框图.....	9
1.3 产品配件.....	9
1.4 产品料号.....	9
1.5 产品照片.....	10
第二章 安装说明.....	11
2.1 接口/尺寸图.....	11
2.2 硬件安装.....	12
2.3 跳线功能设置.....	12
2.4 接口引脚定义.....	12
2.4.1 清 CMOS 跳线设置.....	12
2.4.2 串口 JCOM1, 电压模式跳冒选择.....	12
2.4.3 ATPWR, AT/ATX 模式跳冒选择.....	12
2.4.4 MCU 下载模式设置.....	13
2.5 主板跳冒及接口位置图.....	13
2.6 接口定义.....	14
2.6.1 电源接口.....	14
2.6.2 音频接口.....	15
2.6.3 GPIO 接口.....	15
2.6.4 SATA 电源接口.....	15
2.6.5 USB 接口.....	16

2.6.6 前置面板接口	16
2.6.7 串口	16
2.6.8 风扇电源接口	17
2.6.9 网络输出接口	17
2.6.10 开盖监测接口	17
2.6.11 MCU 软件下载接口	17
2.6.12 MCU 软件 DEBUG 接口	18
第三章 BIOS 程序设置	19
3.1 Main Screen	20
3.2 Advanced Screen	22
3.2.1 CPU Configuration Screen	23
3.2.2 ACPI Settings Screen	25
3.2.3 Super IO Configuration	26
3.2.3.1 Serial PortX Configuration	27
3.2.4 Hardware Monitor	28
3.2.5 SATA Configuration	29
3.2.6 USB Configuration	30
3.2.7 CSM Configuration	32
3.2.8 NVMe Configuration	33
3.2.9 Watchdog Configuration	34
3.2.10 PXE Boot	35
3.3 Chipset Screen	36
3.3.1 System Agent (SA) Configuration	37
3.3.2 PCH-IO Configuration	41

3.4 Security.....	42
3.5 Boot Screen.....	43
3.6 Save & Exit Screen.....	45
第四章 修改记录.....	47
附录.....	47
附一： Watchdog 编程指引.....	47
附二： 术语表.....	48


第一章 产品介绍

1.1 产品规格

Model		EZT-7104
产品类型 Form Factor	产品类型 Form Factor	7" mITX
处理器 Processor System	CPU	Intel Skylake / Kaby lake I3/I5/I7 LGA1151
	处理器 CPU	I5-6500T
	内核数 Core Number	4
	基本主频 Base Frequency	2.5GHz
	最高主频 Max. Speed	3.1GHz
	二级缓存 L2 Cache	6MB
	功耗 TDP (W)	35W
	芯片组 Chipset	H110
	BIOS	AMI EFI
内存 Memory	规格 Technology	DDR4 SO-DIMM Non-ECC
	最大容量 Max. Capacity	32G 2133/2400MHz
	插槽 Socket	2 x SO-DIMM
扩展插槽 Expansion Slot	Mini PCIe	1 x Mini PCIe(PCle+USB Only)
	SIM	1 x SIM
	PCI-Express	1 x PCIe 3.0 8x(By 4x)
存储 Storage	SATA	1 x SATA3.0(7 Pins)
	mSATA	1 x mSATA
安全芯片 IC	板载 On Board	HSC32EU

显示 Graphics	I/O	1 x HDMI
	分辨率 Resolution	4096*2160@24Hz
USB / Type-C	I/O	2 x USB3.0 Type A
	插针 Header Pin	2 x USB2.0(1x2.5mm_2*5Pin)
以太网 Ethernet	控制器 Controller	Intel®I225-AT+I210-IS
	I/O	3 x RJ45 10/100/1000M 1 x SFP 1000M
串口 COM	插针 Header Pin	1 x RS232/RS485/RS422 1 x RS232(Console)
GPIO	插针 Header Pin	4 x GPI 4 x GPO
音频 Audio	插针 Header Pin	1 x 2.54mm
电源 Power Requirements	电源类型 Power Type	1 x 4Pin
	电源电压 Power input Voltage	DC:12V/12A RTC:3.3V/210mAH
环境 Environment	工作温度 Operating Temperature	-10~55°C at 0.7m/s air flow
	存储温度 Storage Temperature	-20~70°C
	工作湿度 Operating Humidity	20~95%RH(non-condensing)
物理特性 Physical	尺寸 Dimensions	170*170mm
	PCB 颜色 Color	Green
	保固 Warranty	二年
操作系统 OS	Microsoft	Windows 10 1809(RS5)
	Linux	Ubuntu 20.04 以上 Yocto 2.4 Rocko

1.2 功能框图

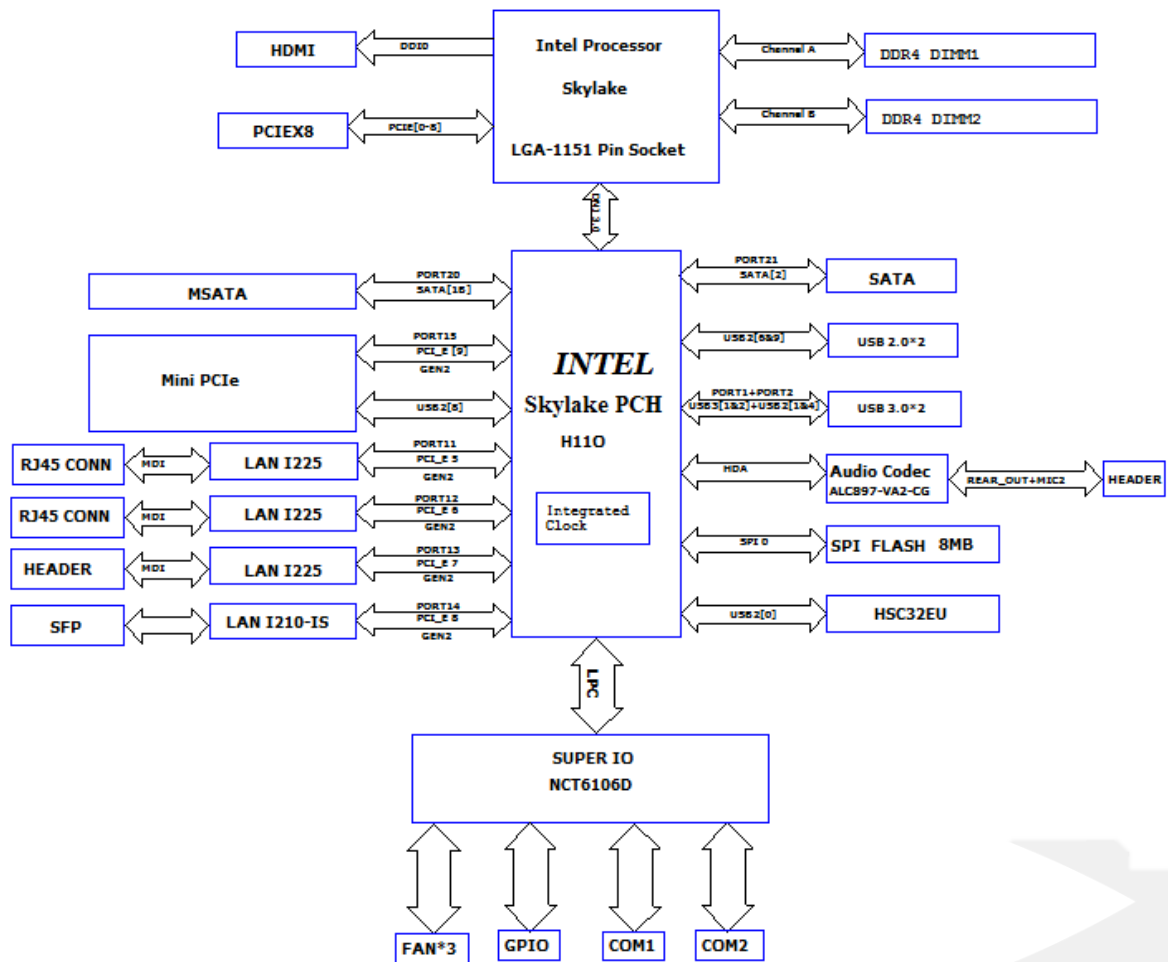




1.3 产品配件

Model Name	Part Number	Specification
跳帽	1.ZRT.40-6117-10-A00	REACH ROHS DIP,Jumper 跳帽,2PIN,2.54mm,5*6*2.3mm,Black ACU 62500247
USB 连线	1.ZRT.46-6497-00-A00	新申请 USB 连线 杜邦 2.54-10P-1 脚—转二 USB-A 型母头线长 130mm USB-B 型右弯头线长 260mm/线材最外层屏蔽胶带包裹/ (包头
网口转接线	1.ZRT.46-6498-00-A00	新申请 网口转接线 杜邦 2.54-10P-1 脚转 8 芯水晶头/线材最外层屏蔽胶带包裹/线长 700mm (包头
散热器	1.ZRT.48-6246-00-A00	新申请 REACH ROHS 散热器 1U 涡轮风扇 1151 (双滚珠) 5 年生命周期 噪音为 40DB, 带五金背板支架, 南瑞 65W

1.4 产品料号

Model Name	Part Number	Specification
EZT-7104	8.ZRT.80-1624-02-LFF	EZT-7104,VER:1.0,Intel, LGA1155 CPU,2*DDR4 SODIMM, 内存,硬盘,CPU,USB 连线,网口转接线,散热器,包装(二十入)

 
1.5 产品照片

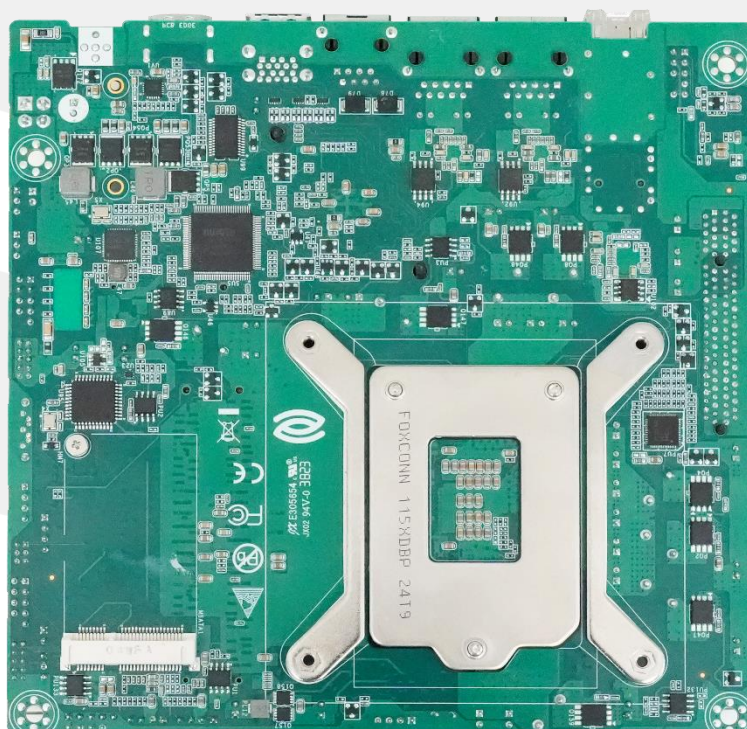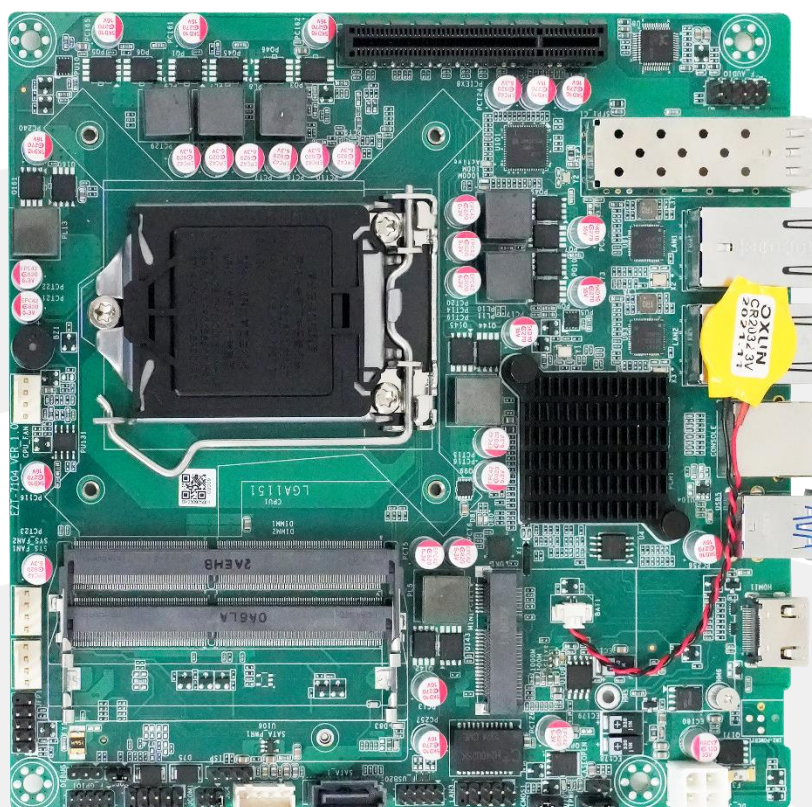

第二章 安装说明

2.1 接口/尺寸图

安装设备时, 请对照此示意图并仔细阅读下面的说明, 安装组件过程中必须小心, 对于有些部件, 如果安装不正确, 设备将不能正常工作。

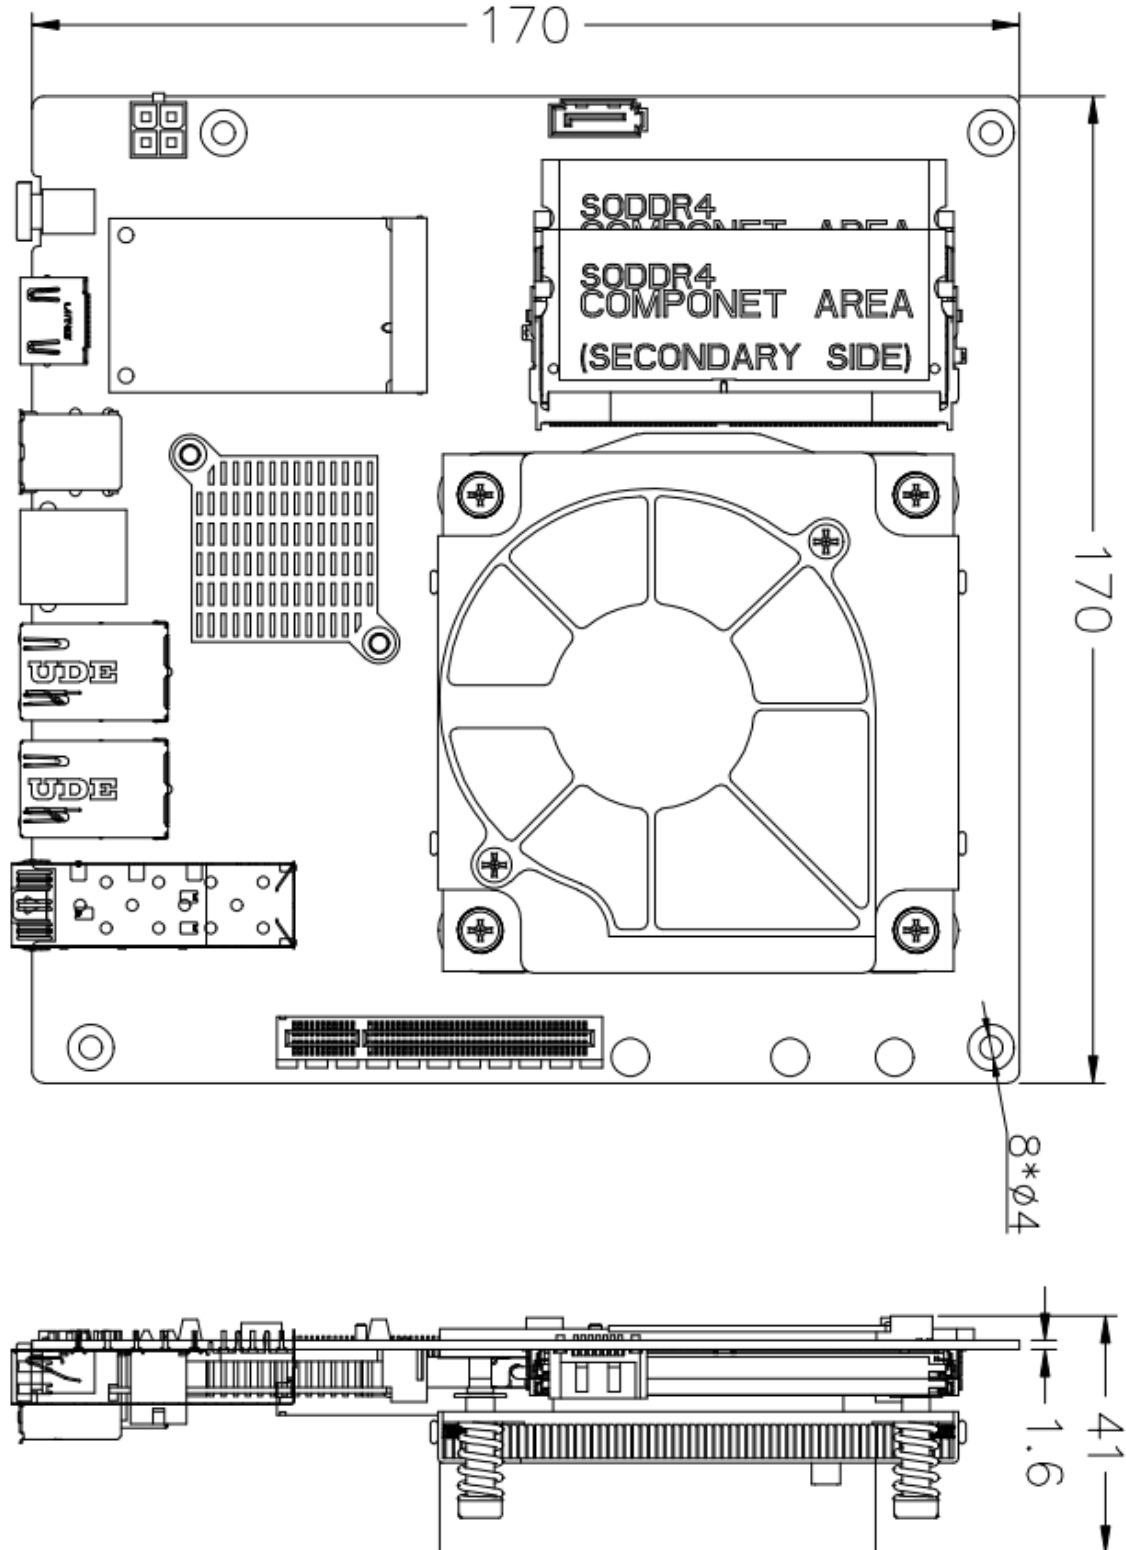

2.2 硬件安装

⚠ 注意：操作时，请戴上防静电手套，因为静电有可能会损坏部件。

本主板关键元器件都是集成电路，而这些元件很容易因为遭受静电的影响而损坏。因此，请在正式安装主板之前，请先做好以下的准备：

1. 拿主板时手握板边，尽可能不触及元器件和插头插座的引脚。
2. 接触集成路元件（如 CPU、RAM 等）时，最好戴上防静电手环/手套。
3. 在集成电路元件未安装前，需将元件放在防静电垫或防静电袋内。
4. 在确认电源的开关处于断开位置后，再插上电源插头。

2.3 跳线功能设置


在进行硬件设备安装之前，请按照您的需要对相应的跳线进行设置。

提示：如何识别跳线、接口的第 1 针脚，观察插头插座旁边的文字标记，会用“1”或加粗的线条或三角符号表示；看看背面的焊盘，方型焊盘为第 1 针脚；所有跳线的针脚 1 旁都有 1 个白色箭头。

2.4 接口引脚定义

2.4.1 清 CMOS 跳线设置


主板提供插针 JCMOS1 来清 CMOS，JCMOS1 插针定义如下：

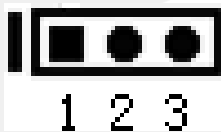

设置	功能
1-2 短路	清除 CMOS 内容，所有 BIOS 设置恢复成出厂值
2-3 短路	正常工作状态(Default)

2.4.2 串口 JCOM1，电压模式跳冒选择

 JC4, JCOM1 电压模式选择：



COM1	SUPPORT RING IN	SUPPORT +12V OUT	SUPPORT +5V OUT
JC4	1-2	5-6	3-4

2.4.3 ATPWR，AT/ATX 模式跳冒选择


主板提供一个 ATPWR，1x3pin，2.0mm 来设置不同开机模式，ATPWR 插针定义如下：



设置	功能
1-2 短路	AT 模式
2-3 短路	ATX 模式

2.4.4 MCU 下载模式设置

 
主板提供插针 MODE 来进入 MCU 下载模式，MODE 插针定义如下：




设置	功能
1-2 不短路	正常工作状态(Default)
1-2 短路	进入 MCU 下载模式

2.5 主板跳冒及接口位置图

下图为主板跳冒及接口位置图，使用前请对照此示意图并仔细阅读说明后操作。

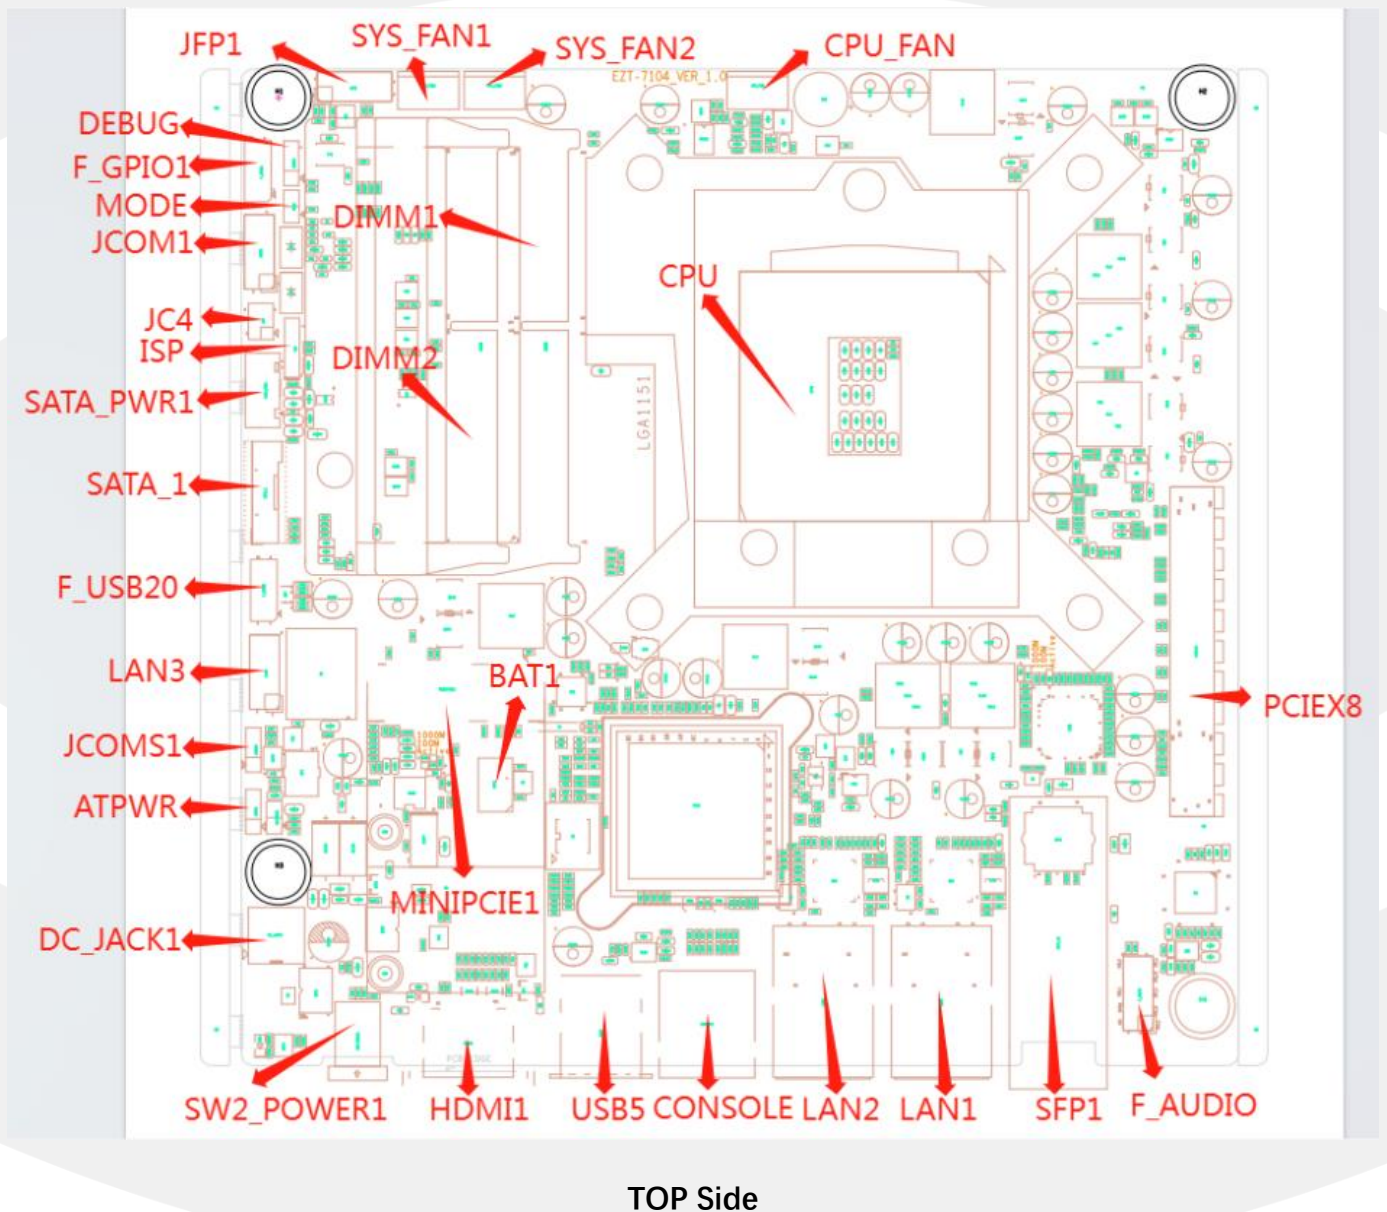

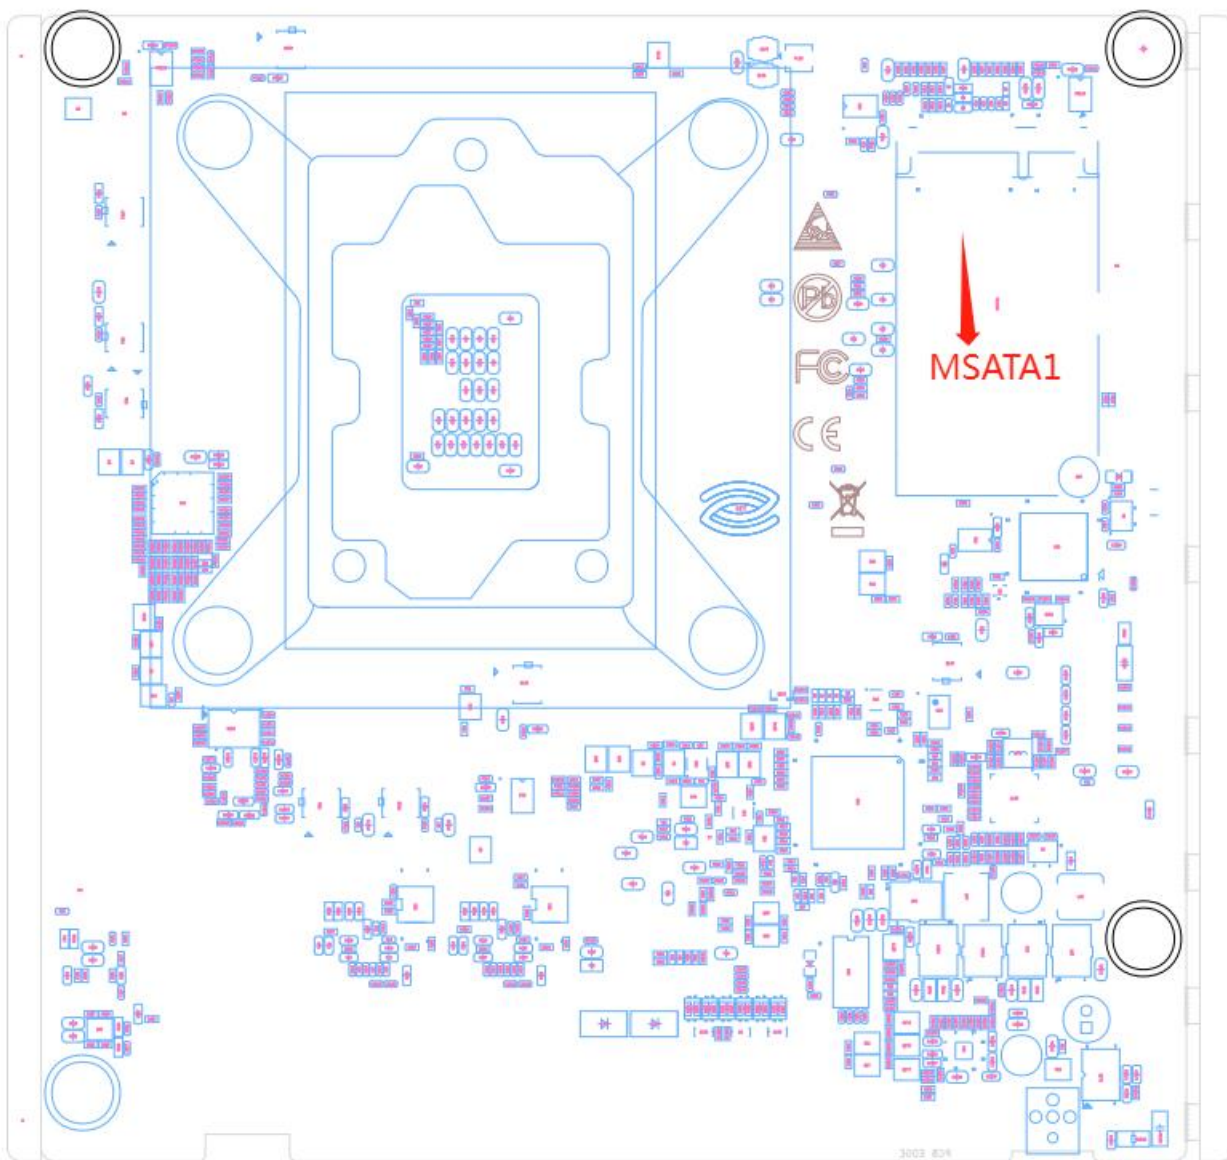


Bottom Side

2.6 接口定义

2.6.1 电源接口


DC_JACK1, 供电接口, ATX 2*2 4pin

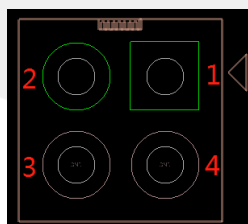

管脚	信号名称
1	VCC
2	VCC
3	GND
4	GND

2.6.2 音频接口


F_AUDIO 前置音频面板 2.54mm, 2x5pin

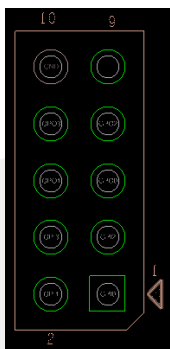

管脚	信号名称	管脚	信号名称
1	MIC L	2	GND
3	MIC R	4	PRESENCE
5	Line out R	6	MIC-JD
7	IO-SENSE	8	NC
9	Line out L	10	LINE-JD

2.6.3 GPIO 接口

F_GPIO1, 前面板状态接口, 2.0mm 间距插针

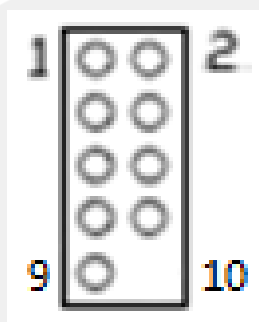

管脚	信号名称	管脚	信号名称
1	GPIO	2	GPI1
3	GPI2	4	GPI3
5	GPO0	6	GPO1
7	GPO2	8	GPO3
9	+5V	10	GND

2.6.4 SATA 电源接口


SATA_PWR1 脚距 2.54mm, 4PIN 插针



管脚	信号名称
1	12V
2	GND
3	GND
4	5V

2.6.5 USB 接口


USB 2.0 接口, 2.0mm 间距插针

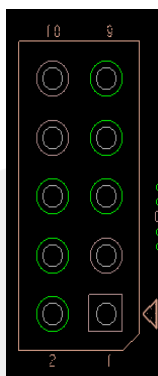

管脚	信号名称	管脚	信号名称
1	+5V	2	GND
3	USB1_Data-	4	GND
5	USB1_Data+	6	USB2_Data+
7	GND	8	USB2_Data-
9	GND	10	+5V

2.6.6 前置面板接口


JFP1, 前面板状态接口, 2.54mm 间距 2*5pin 插针

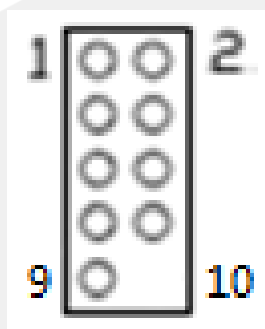

管脚	信号名称	管脚	信号名称
1	HDD LED+	2	PW LED+
3	HDD LED-	4	PW LED-
5	GND	6	PW Buttom
7	RESET	8	GND
9	NC	10	--

2.6.7 串口


JCOM1, RS232/485/422 串口, 2.54mm 间距 2*5 插针

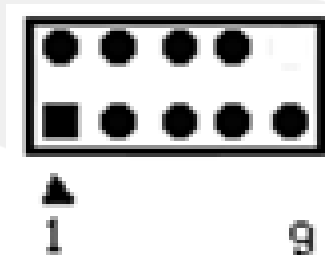

管脚	信号名称 (RS232)	信号名称 (RS422)	信号名称 (RS485)
1	DCD#	TXD-	Data-
2	RXD	TXD+	Data+
3	TXD	RXD+	NC
4	DTR#	RXD-	NC
5	GND	GND	GND
6	DSR#	NC	NC
7	RTS#	NC	NC
8	CTS#	NC	NC
9	RI#	NC	NC

2.6.8 风扇电源接口

主板支持 3 个风扇座子分别为 CPU_FAN1, SYS_FAN1, SYS_FAN2 4Pin 风扇

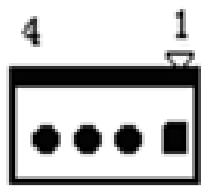


管脚	信号名称
1	GND
2	+12V
3	FAN_TACH
4	FAN_PWM

注: SYS_FAN1, SYS_FAN2 共用一个风扇调速

2.6.9 网络输出接口


LAN3, 网络输出接口, 2.54mm 间距 2*5pin 插针

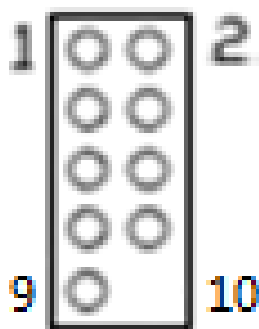

管脚	信号名称	管脚	信号名称
1	LAN3_MX0-	2	LAN3_MX0+
3	LAN3_MX1-	4	LAN3_MX1+
5	LAN3_MX2-	6	LAN3_MX2+
7	LAN3_MX3-	8	LAN3_MX3+
9	NC	10	--

2.6.10 开盖监测接口

 CASOPEN, 开盖监测接口, 2.0mm 间距 1*2pin 插针



管脚	信号名称
1	CASEOPEN#
2	GND

2.6.11 MCU 软件下载接口


ISP, MCU 软件下载接口, 2.0mm 间距 1*4pin 插针



管脚	信号名称
1	+5V
2	D-
3	D+
4	GND

2.6.12 MCU 软件 DEBUG 接口

 ISP, MCU 软件 DEBUG 接口, 2.0mm 间距 1*3pin 插针



管脚	信号名称
1	TXD
2	RXD
3	GND

第三章 BIOS 程序设置

AMI BIOS 刷新

BIOS 提供对硬件资源的底层驱动，是联系硬件和操作系统的桥梁。现在硬件和各种应用软件不断更新，当您的系统遇到问题时，例如系统不支持最新公布的 CPU 时，就需要升级您的 BIOS 了。

注意：

1. **升级 BIOS 只在遇到问题，必要的时候进行。**
2. **升级 BIOS 请使用我们驱动光盘内所附的 BIOS 读写程序，或者在相关网站下载更新版本的程序。**
3. **在升级过程中不要关闭电源或重新启动系统，以免造成您的 BIOS 资料将被损坏，系统也可能不能启动。**
4. **为防止意外发生，请您先备份当前的 BIOS 资料。**

AMI BIOS 描述

开机时，BIOS 会对主板上的硬件进行自我诊断，设定硬件时序参数等工作，最后才将系统控制权交给操作系统。如何正确的设定 BIOS 参数对系统是否稳定的工作及系统是否工作在最佳状态至关重要。

进入 BIOS 参数设置：

电脑开机，在完成自我诊断后，屏幕上会显示出如下信息：Del->SETUP，此时您点击一下 Del 键，则 BIOS 在完成 IDE 等设备的侦测后会自动转入 SETUP 设置画面。

1. 打开系统电源或重新启动系统，显示器屏幕将出现自我测试的信息：
2. 当屏幕中间出现“Pressto enter setup”提示时，按下键，就可以进入 BIOS 设定程序。
3. 以方向键移动至您要修改的选项，按下<Enter>键即可进入该选项的子画面。
4. 使用方向键及<Enter>键即可修改所选项目的值，按回车键选择 BIOS 选项并修改。
5. 任何时候按下<Esc>键即可回到上一画面。

Setup Utility User Interface

This document describes BIOS Setup Utility user interface.

(The following figures of setup utility are captured through serial redirection, so some difference exists to actual screens.)

3.1 Main Screen

The Main screen is the first screen that is displayed when the BIOS Setup is entered.




Setup Item	Options	Help Text	Comments
BIOS Information			
BIOS Vendor			Displays BIOS vendor .
Project Version			Displays the current BIOS version: Format: AAAABBC AAAAA = Project name BB = BIOS revision C = Customer number
Build Date and Time			Displays the current BIOS build date.

Setup Item	Options	Help Text	Comments
Access Level			Displays password level that setup is running in: Administrator or User. With no passwords set, Administrator is the default mode.
Processor Information			
CPU XXXXX			Displays the CPU Brand String installed in the system.
Total Memory			Displays the total physical memory installed in the system, MB Unit.
System Language	English	Choose the system default language.	
System Date	[Day of week MM/DD/YYYY]	Set and display the Date.	
System Time	[HH:MM:SS]	Set and display the Time.	

3.2 Advanced Screen


The Advanced screen provides an access point to configure several options. On this screen, the user selects the option that is to be configured.

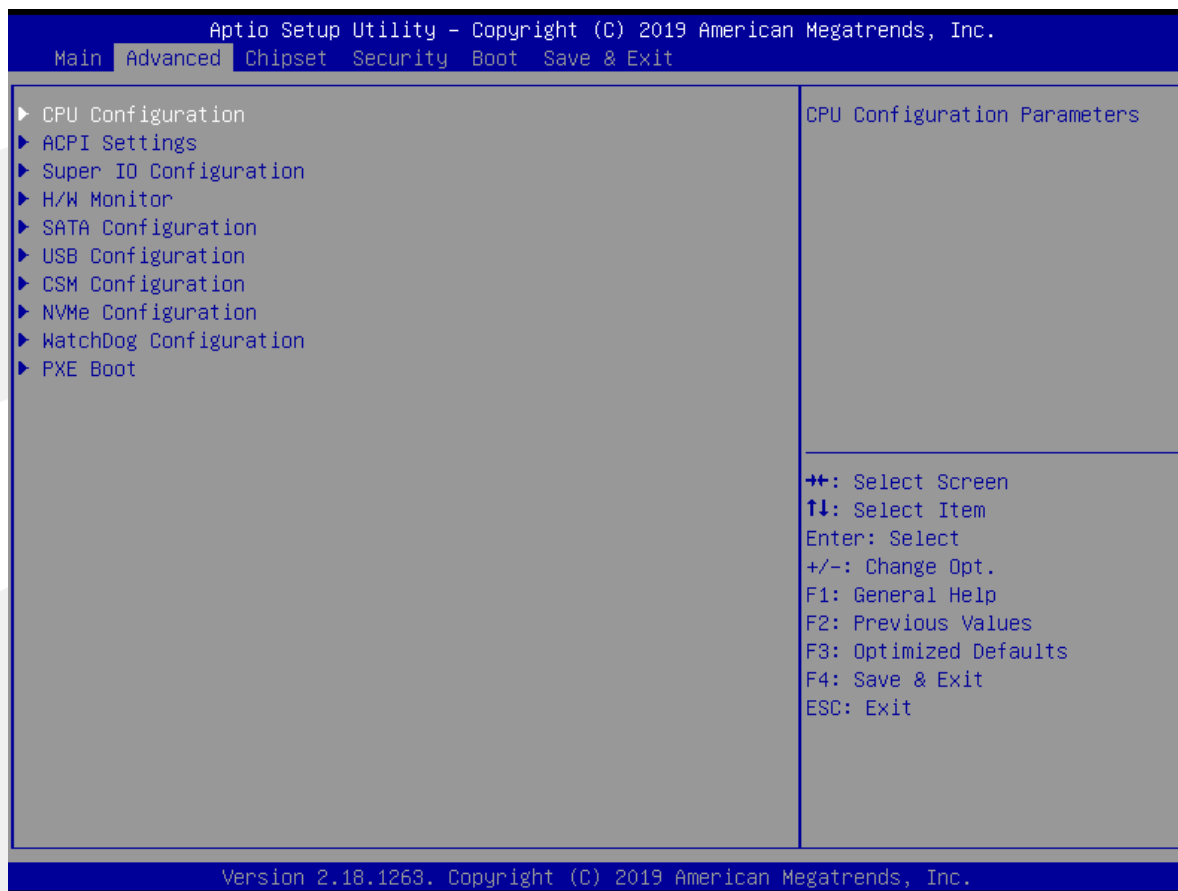

Setup Item	Options	Help Text	Comments
CPU Configuration		CPU Configuration Parameters.	
ACPI Settings		System ACPI Parameters.	
Super IO Configuration		System Super IO chip Parameters.	
HW Monitor		Monitor hardware states.	
SATA Configuration		SATA Devices Configuration.	
USB Configuration		USB Configuration Parameters.	
CSM Configuration		CSM configuration: Enable/Disable, Option ROM execution settings, etc.	
NVMe Configuratioin		NVMe Device Options Settings.	
Watchdog configuration		Set System Watchdog Parameters.	
PXE Boot		Legacy PXE Support Control.	

3.2.1 CPU Configuration Screen

The CPU Configuration screen allows the user to view the processor information, and to enable or disable processor options. To access this screen from the Main screen, choose **Advanced > CPU Configuration**.

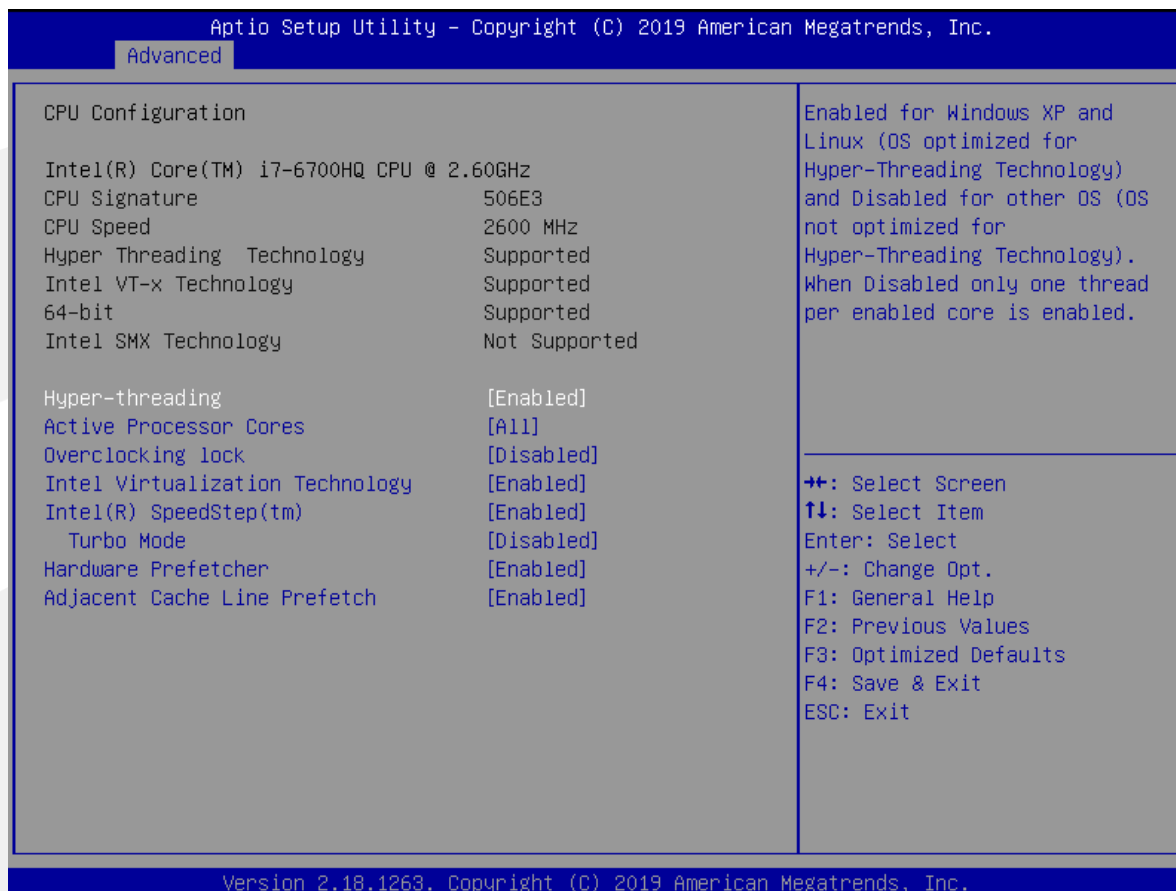

Setup Item	Options	Help Text	Comments
CPU Configuration			
CPU Speed			
Hyper-threading			
Intel VT-X Technology			
64-bit			
Intel SMX Technology			
Hyper-threading	Enabled Disabled	Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). When Disabled only one thread per enabled core is enabled.	
Active Processor Cores	All 1 2 3	Number of cores to enable in each processor package.	
Overclocking Lock	Disabled		
Intel Virtualization Technology	Enabled Disabled	When enabled a VMM can utilize the additional hardware capabilities provided by Vanderpool technology.	
Intel® SpeedStep™	Enabled Disabled	Allows more than two frequency ranges to be supported.	
Turbo Mode	Enabled		
Hardware Prefetcher	Enabled Disabled	To turn on/off the MLC streamer prefetcher.	
Adjacent Cache line Prefetch	Enabled Disabled	To turn on/off prefetching of adjacent cache lines.	

3.2.2 ACPI Settings Screen

The ACPI Settings screen allows the user to set the system ACPI parameters.


To access this screen from the Main screen, choose **Advanced > ACPI Settings**.



Setup Item	Options	Help Text	Comments
ACPI Settings			
ACPI Sleep State	Suspend Disabled S3 (Suspend to RAM)	Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.	Sleep supported optionally.

3.2.3 Super IO Configuration


The Super IO Configuration screen allows the user to view the super IO information, and to enable or disable super IO options. To access this screen from the Advanced screen, choose **Advanced > Super IO Configuration**.

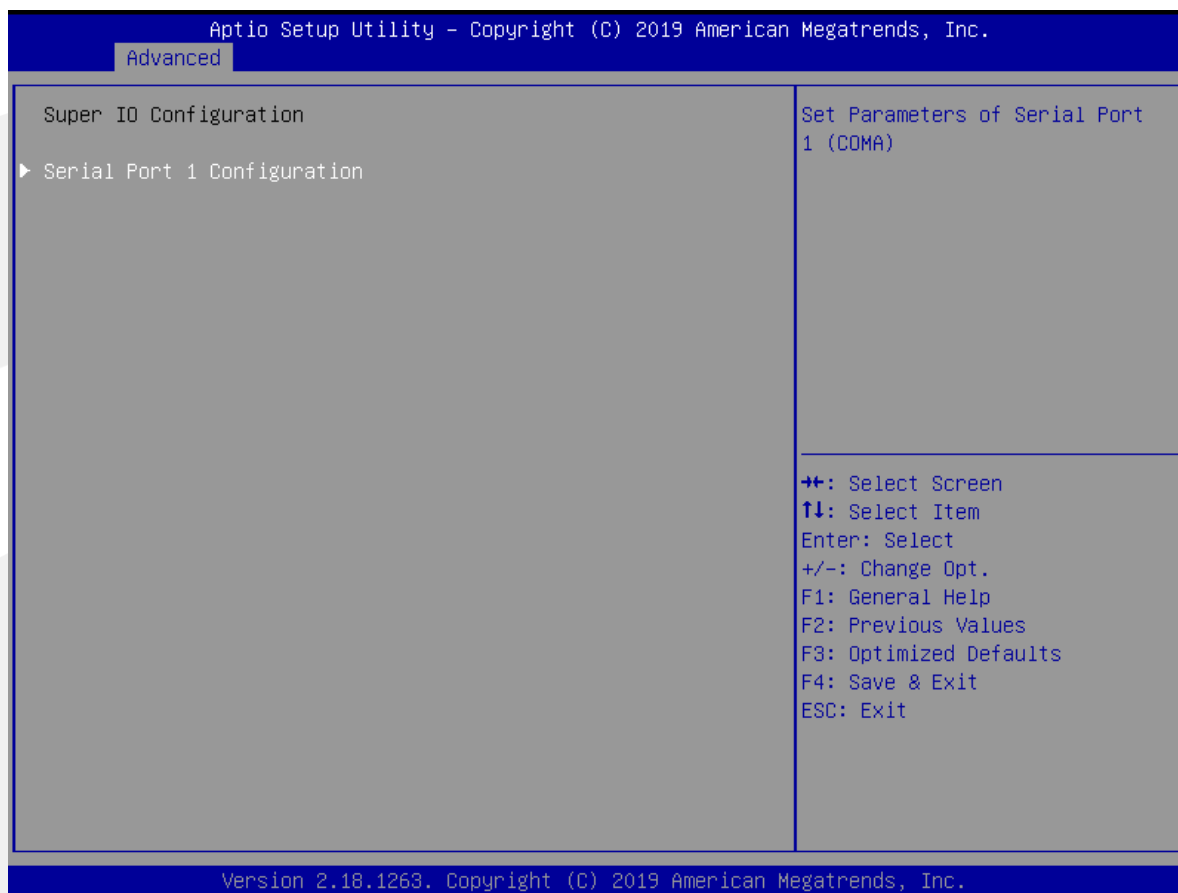

Setup Item	Options	Help Text	Comments
Super IO Configuration			
Serial Port 1 Configuration			Set Parameters of Serial Port 1 (COM1).

3.2.3.1 Serial PortX Configuration


The Super IO Configuration screen allows the user to view the super IO information, and to enable or disable serial port options. To access this screen from the Advanced screen, choose **Advanced-> Super IO Configuration->Serial PortX Configuration**.

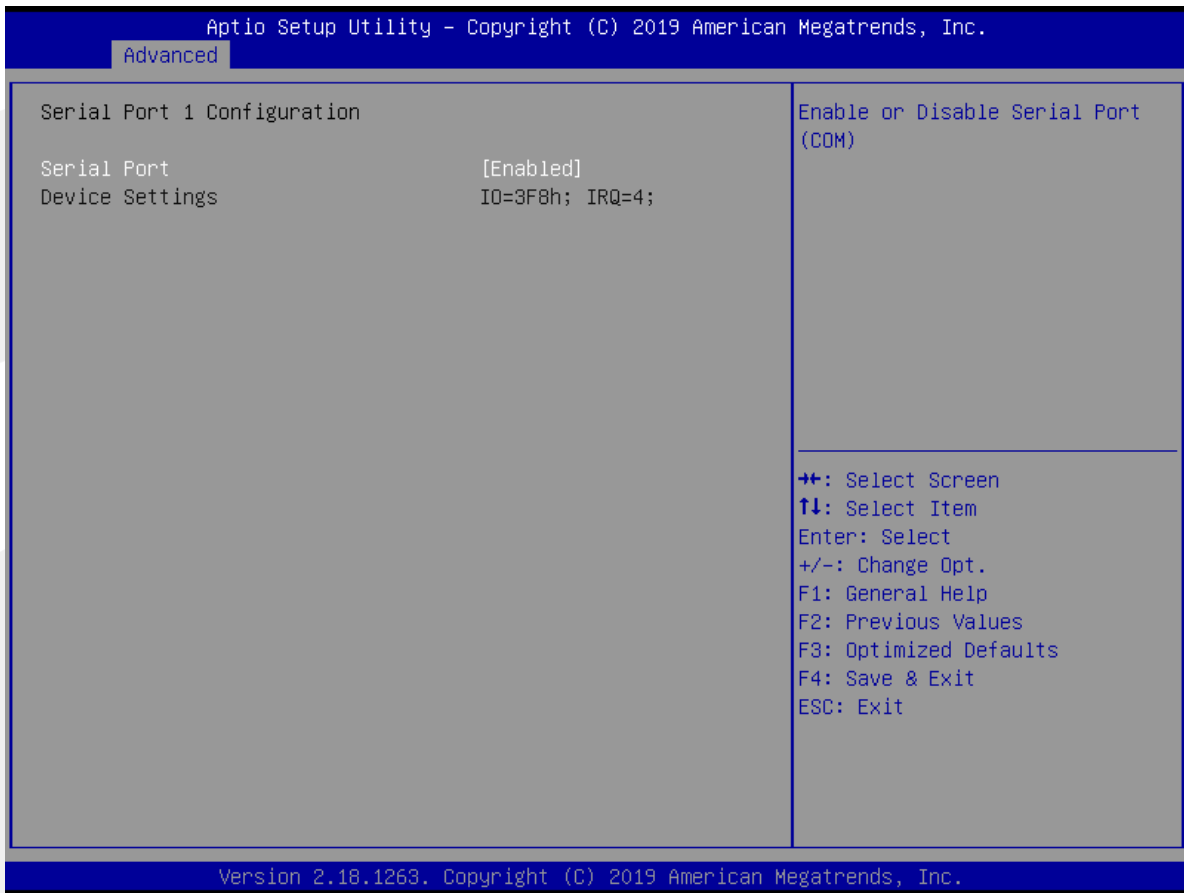

Setup Item	Options	Help Text	Comments
Serial Port 1 Configuration			
Serial Port	Enabled Disabled	Enable or Disable Serial Port (COM).	
Device Settings			

3.2.4 Hardware Monitor

The hardware monitor screen allows the user to view the hardware information. To access this screen from the Advanced screen, choose **Advanced-> Hardware Monitor**.

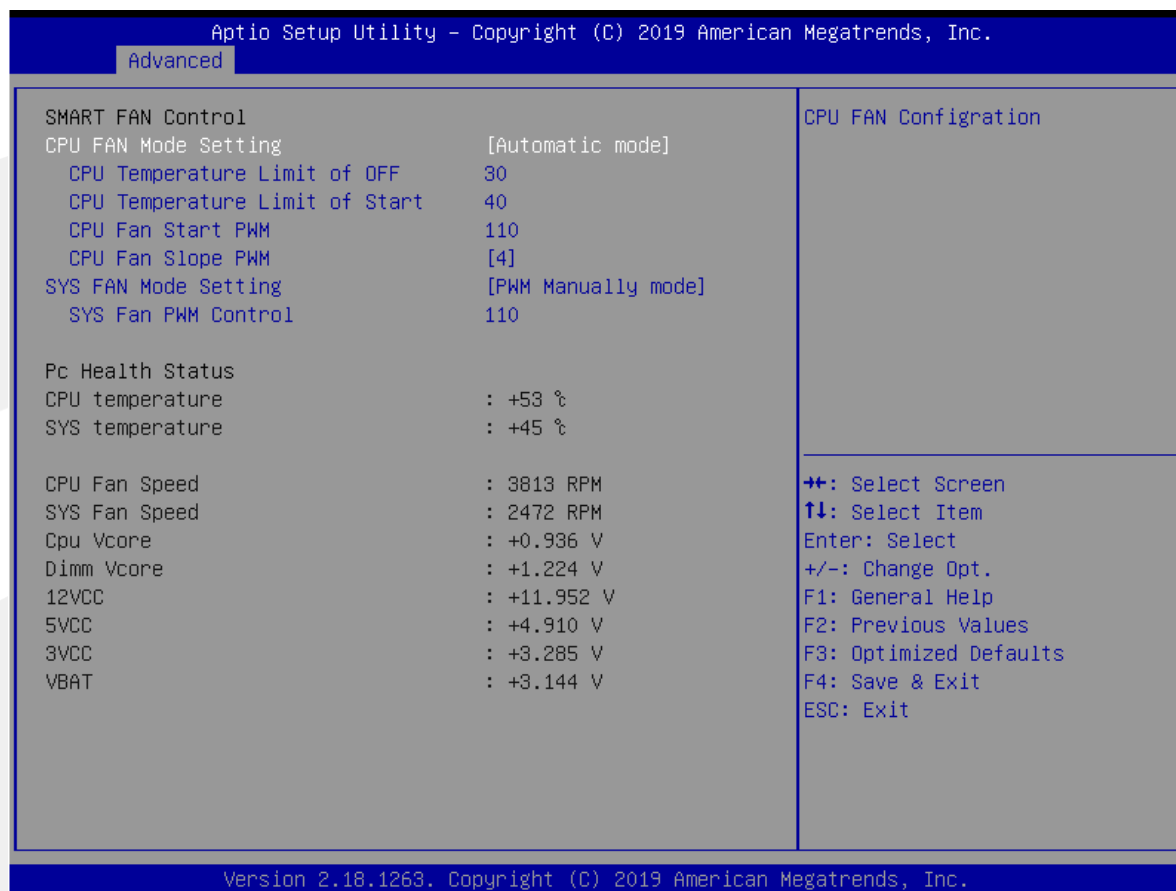

Setup Item	Options	Help Text	Comments
PC Health Status			
CPU FAN Mode Setting	Automatic mode Manual mode	CPU Fan control mode select.	When Manual mode selected, Manual PWM Setting shows to set FAN PWM Duty.
SYS FAN Mode Setting	Automatic mode Manual mode	SYS Fan control mode select.	When Manual mode selected, Manual PWM Setting shows to set FAN PWM Duty.
CPU temperature		Shows Current CPU temperature.	NOTE1: Sometimes not the actual temperature value, just indicates temperature tolerance limitation.
SYS temperature		Shows current system temperature.	
CPU Fan Speed			
SYS Fan Speed			
Cpu Vcore			
Dimm Vcore			
12VCC			
5VCC			
3VCC			
VBAT			

3.2.5 SATA Configuration


The SATA Configuration screen allows the user to view the SATA Controller information, and to enable or disable SATA Controller options. To access this screen from the Main screen, choose **Advanced > SATA Configuration**.



Setup Item	Options	Help Text	Comments
SATA Configuration			
SATA Controller(s)	Enabled Disabled	Enable / Disable SATA Device.	
SATA Mode Selection	AHCI Mode	Select AHCI.	
SATA Controller Speed	Default Gen1 Gen2 Gen3	SATA port speed settings.	
Serial ATA Port 0			Show HDD information connected.
Serial ATA Port 1			
Serial ATA Port 2			
Serial ATA Port 3			

3.2.6 USB Configuration


The USB Configuration screen allows the user to view the USB Configuration information, and to enable or disable options. To access this screen from the Main screen, choose **Advanced > USB Configuration**.

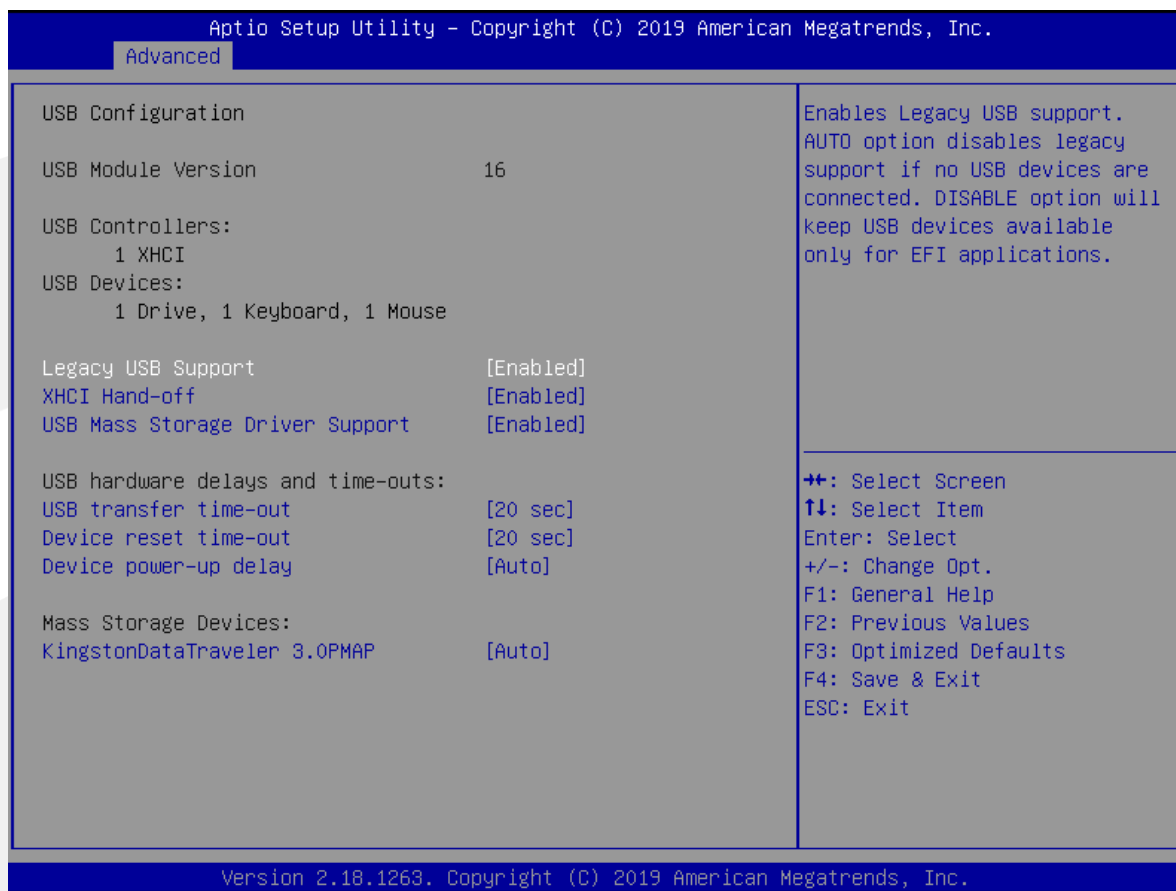

Setup Item	Options	Help Text	Comments
USB Configuration			
Legacy USB Support	Enabled Disabled	Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.	
XHCI Hand-off	Enabled Disabled	This is a workaround for Oses without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.	
USB MASS Storage Driver Support	Enabled Disabled	Enable/Disable USB Mass Storage Driver Support.	
USB hardware delays and time-outs			
USB transfer time-out	1 sec 5 sec 10 sec 20 sec	The time-out value for Control, Bulk, and Interrupt transfers.	
Device reset time-out	1 sec 5 sec 10 sec 20 sec	USB mass storage device Start Unit command time-out.	
Device power-up delay	Auto Manual	Maximum time the device will take before it properly reports itself to the Host Controller. ' auto' uses default value: for a Root port it is 100ms,for a Hub port the delay is taken from Hub descriptor.	
Mass Storage Device			
KingstonDataTraverler 3.0PMAP	Auto		

3.2.7 CSM Configuration


The CSM Configuration screen allows the user to view the CSM information, and to enable or disable CSM options. To access this screen from the Main screen, choose **Advanced > CSM Configuration**.

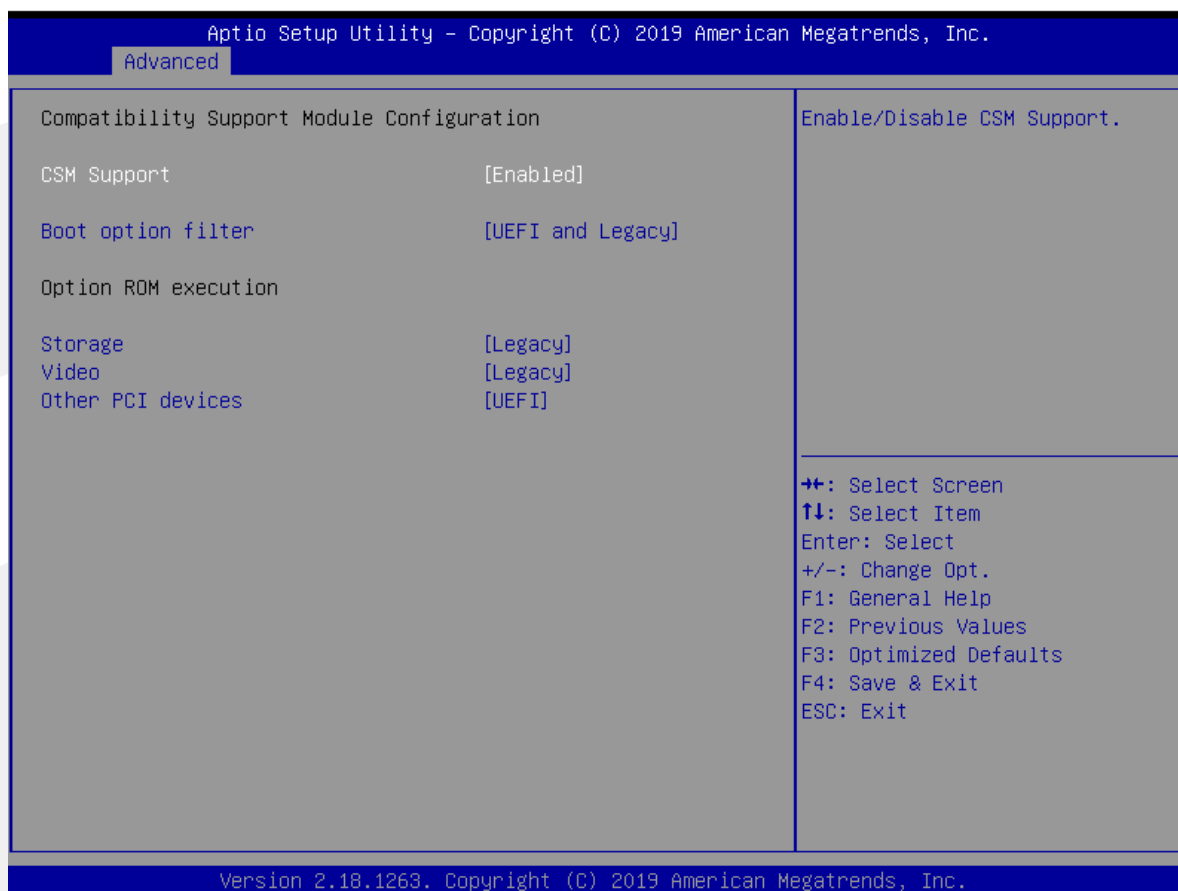

Setup Item	Options	Help Text	Comments
CSM Configuration			
CSM Support	Enabled Disabled	Enable / Disable CSM support.	
Boot option filter	UEFI and Legacy Legacy only UEFI only	This option control Legacy/UEFI ROMs priority.	
Option ROM execution			
Storage	Legacy UEFI Do not lunch	Control the execution of UEFI and Legacy Storage OpROM.	
Video	Legacy UEFI Do not lunch	Control the execution of UEFI and Legacy video OpROM.	
Other PCI devices	Legacy UEFI Do not lunch	Determines OpROM execution policy for devices other than Network,Storage or video.	

3.2.8 NVMe Configuration


The NVMe Configuration screen allows the user to view the NVMe device information. To access this screen from the Main screen, choose **Advanced > NVMe Configuration**.

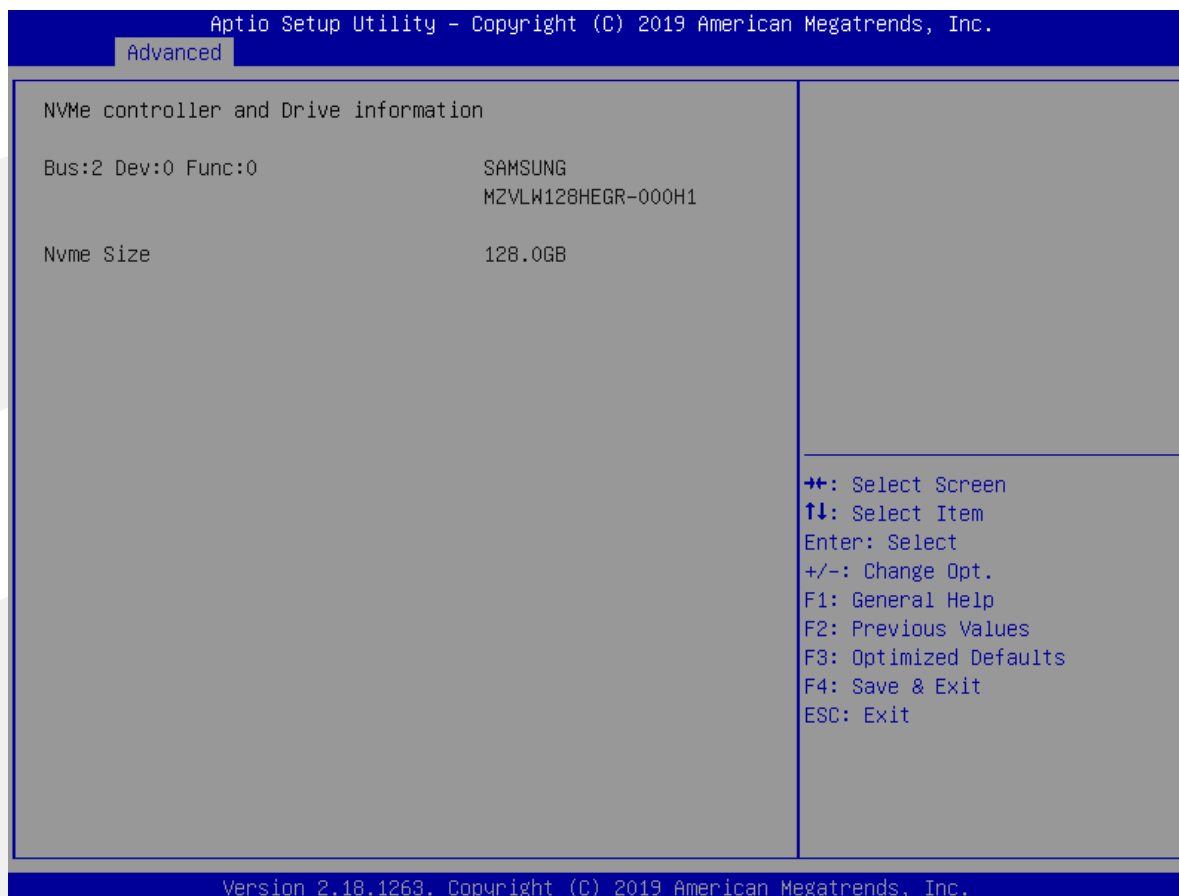

Setup Item	Options	Help Text	Comments
NVMe Configuration			
Controller 0			Show NVMe device information connected.

3.2.9 Watchdog Configuration

The Watchdog Configuration screen allows the user to Set System WatchDog Parameters. To access this screen from the Main screen, choose **Advanced > Watchdog Configuration**.

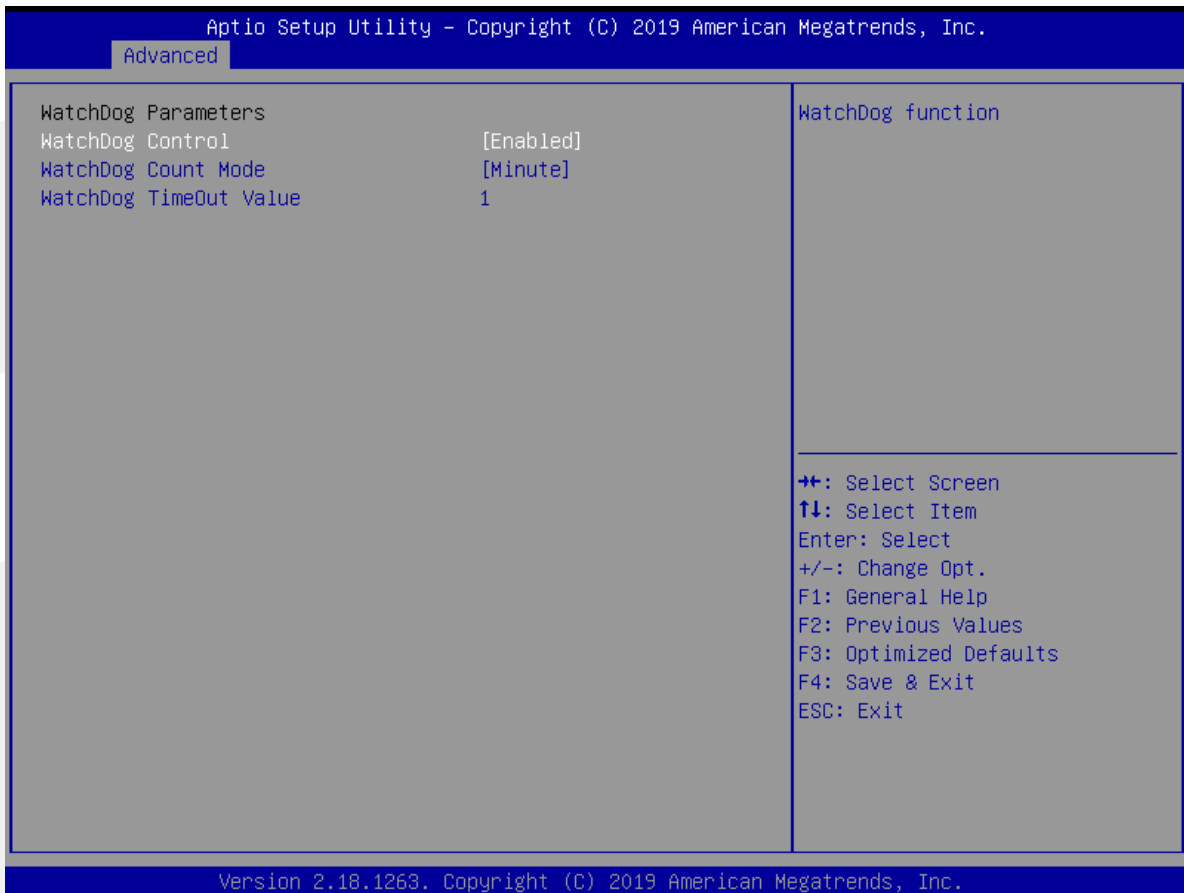

Setup Item	Options	Help Text	Comments
Watchdog Parameters			
WatchDog Control	Disabled Enabled		WatchDog function.
WatchDog Count Mode	Minute Second		WatchDog Count Mode Selection.
WatchDog TimeOut Value	1		Fill WatchDog TimeOut (0~255),0 means function disabled.

3.2.10 PXE Boot


The PXE Boot screen allows the user to Enable or Disable Boot Option for Legacy Network Devices. To access this screen from the Main screen, choose **Advanced > PXE Boot**.



Setup Item	Options	Help Text	Comments
PXE Boot			
Launch LAN PXE OpROM1	Disabled Enabled		Legacy PXE Support Control.
Launch LAN PXE OpROM2	Disabled Enabled		Legacy PXE Support Control.

3.3 Chipset Screen

The Chipset screen provides an access point to configure SA Configuration and PCH-IO configuration. To access this screen from the Main screen, press the right arrow until the Chipset screen is chosen.

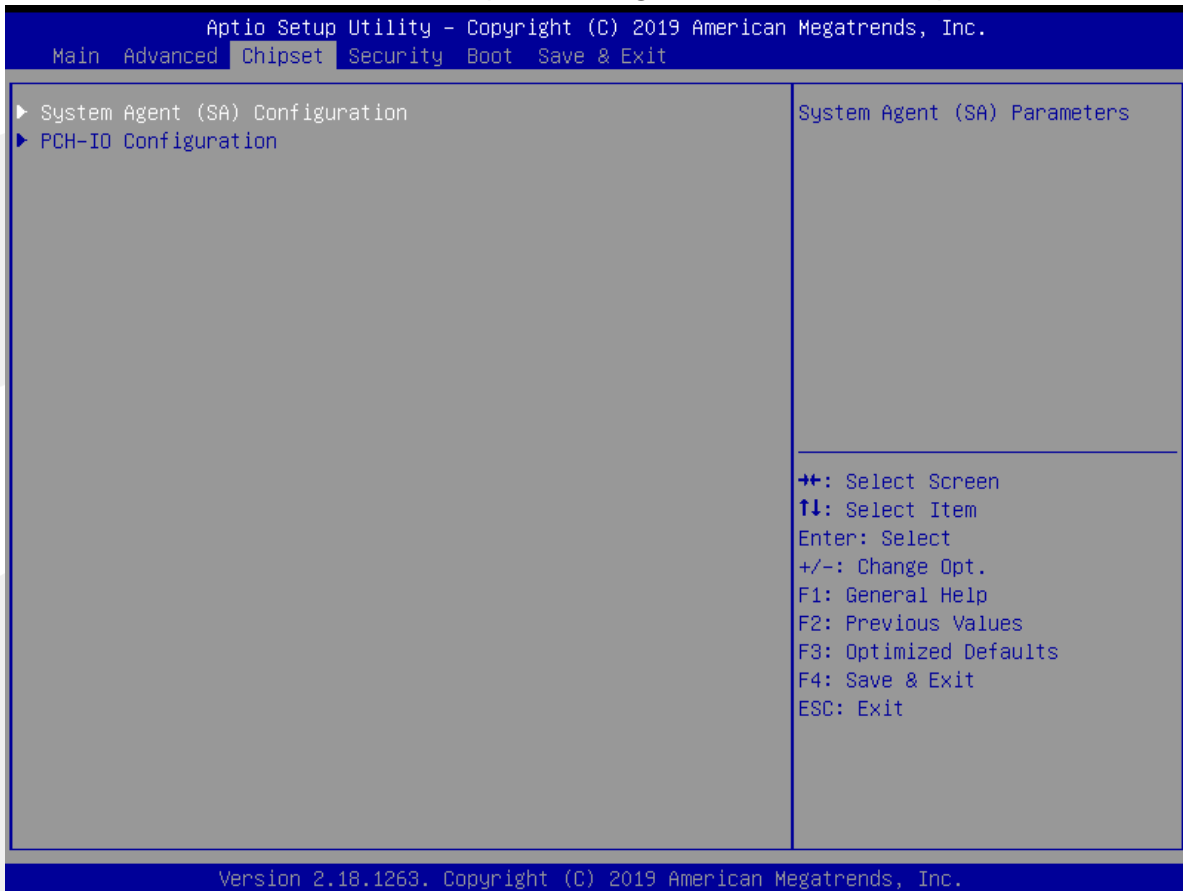


Setup Item	Options	Help Text	Comments
Chipset Screen			
System Agent (SA) Configuration		System Agent (SA) Parameters.	
PCH-IO Configuration		PCH Parameters.	


3.3.1 System Agent (SA) Configuration

The North Bridge Screen allows user to set NB chipset configuration.


To access this screen, from the Main screen, choose **Chipset> System Agent (SA) Configuration**.

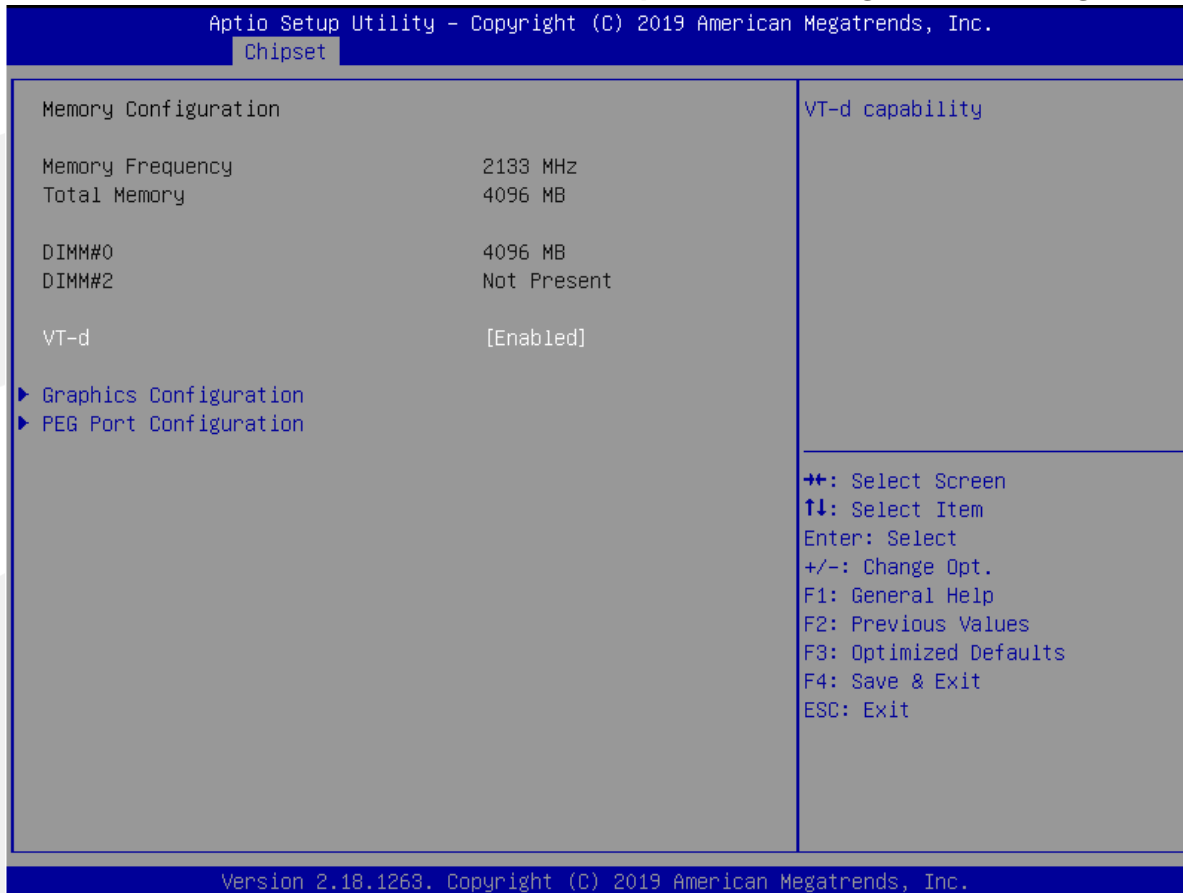

Setup Item	Options	Help Text	Comments
System Agent (SA) Configuration			
Memory Configuration			
Memory Information		Show Memory information.	
Memory Frequency			
Total Memory		Total Memory in the System.	
DIMM#0			
DIMM#2			
VT-d	Disabled Enabled	Check to enable VT-d function on MCH.	
Graphics Configuration		Graphics Configuration.	
PEG Port Configuration		PEG Port Options.	

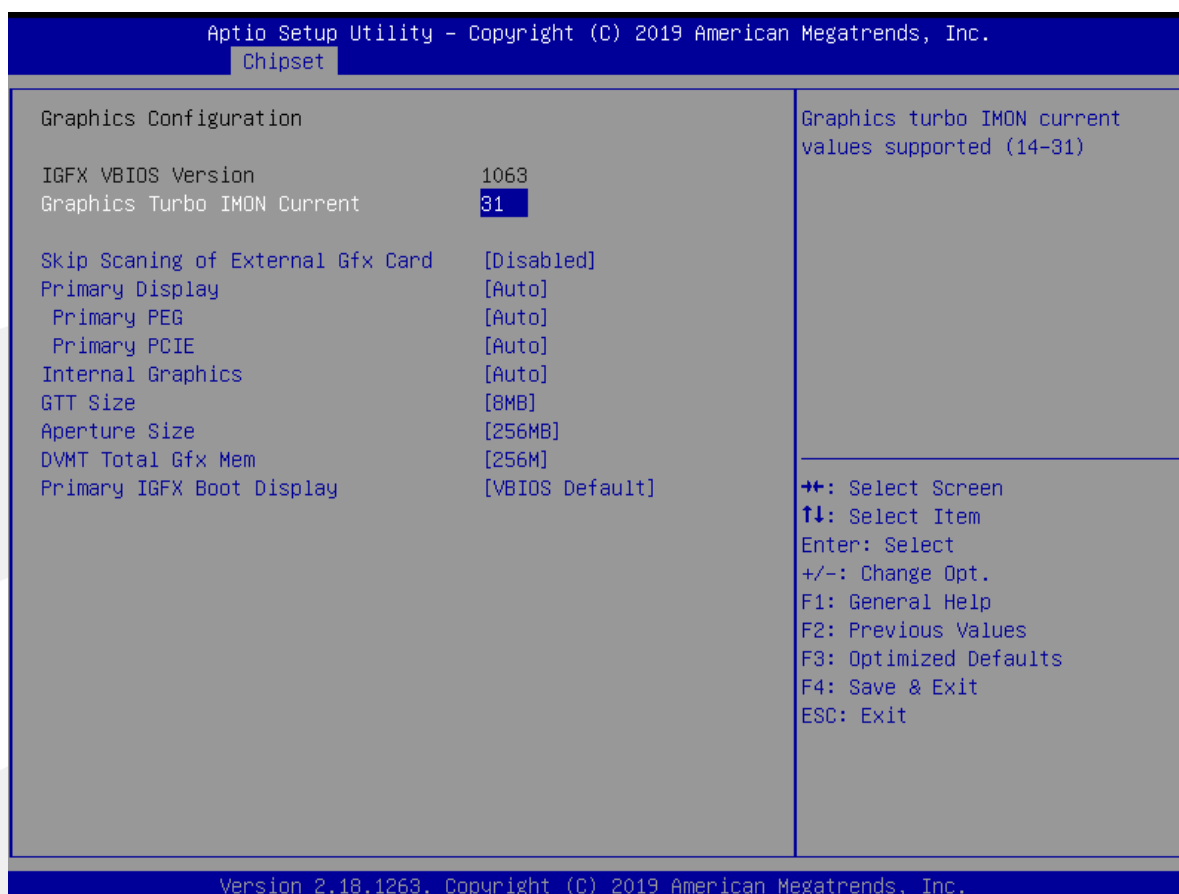

Setup Item	Options	Help Text	Comments
System Agent (SA) Configuration			
Graphics Configuration			
Skip Scanning of External Gfx Card	Disabled Enabled		
Primary Display	Auto IGFX PEG PCIE		
Primary PEG	Auto PEG11 PEG12	Select PEG0/PEG1/PEG2/PEG3 Graphics device should be Primary PEG.	
Primary PCIE	Auto PCIE1 PCIE2 PCIE3 PCIE4 PCIE5 PCIE6 PCIE7	Select Auto/PCIE1/PCIE2/PCIE3/PCIE4/PCIE5/PCIE6/PCIE7 of D28:F0/F1/F2/F3/F4/F5/F6/F7, PCIE8/PCIE9/PCIE10/PCIE11/PCIE12/PCIE13/PCIE14/PCIE15 of D29:F0/F1/F2/F3/F4/F5/F6/F7, PCIE16/PCIE17/PCIE18/PCIE19 of D27:F0/F1/F2/F3, Graphics device should be Primary PCIE.	
Internal Graphics	Auto Disabled Enabled	Keep IGFX enabled based on the setup options.	
GTT Size	2MB 4MB 8MB	Select the GTT Size.	
Aperture Size	128MB 256MB 512MB 1024MB 2048MB	Select the Aperture Size. Note: Above 4GB MMIO BIOS assignment is automatically enabled when selecting 2048MB aperture. To use this feature, please disable CSM Support.	
DVMT Total Gfx Mem	128M 256M MAX	Select DVMT5.0 Total Graphic Memory size used by the Internal Graphics Device.	
Primary IGFX Boot Display	VBIOS Default HDMI eDP	Select the Video Device which will be activated during POST. This has no effect if external graphics present.	

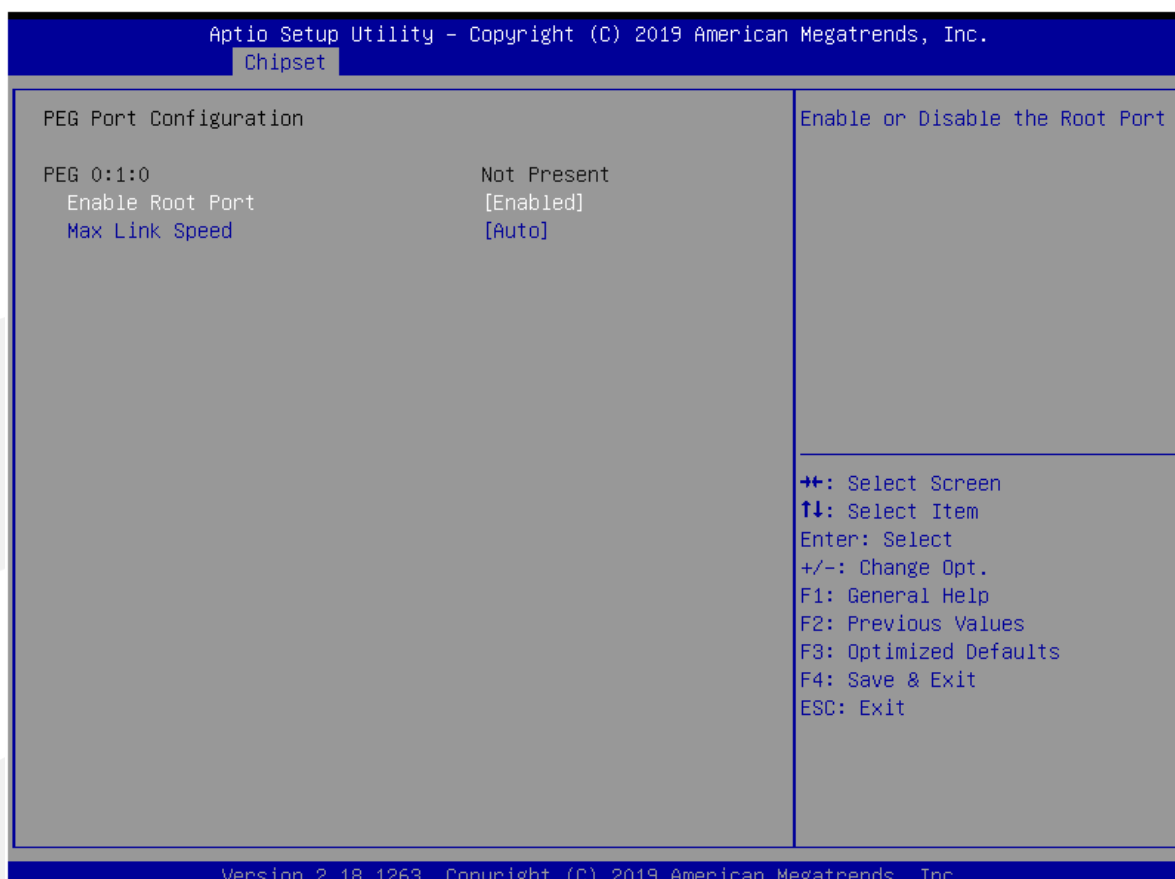


Setup Item	Options	Help Text	Comments
System Agent (SA) Configuration			
PEG Port Configuration			
PEG 0:1:0			
Enable Root Port	Disabled Enabled	Enable or Disable the Root Port.	
Max Link Speed	Auto GEN1 GEN2 GEN3	Configure PEG 0:1:0 Max Speed.	

3.3.2 PCH-IO Configuration

The South Bridge Screen allows user to set SB chipset configuration.


To access this screen form the Main screen, choose **Chipset> PCH-IO Configuration**.

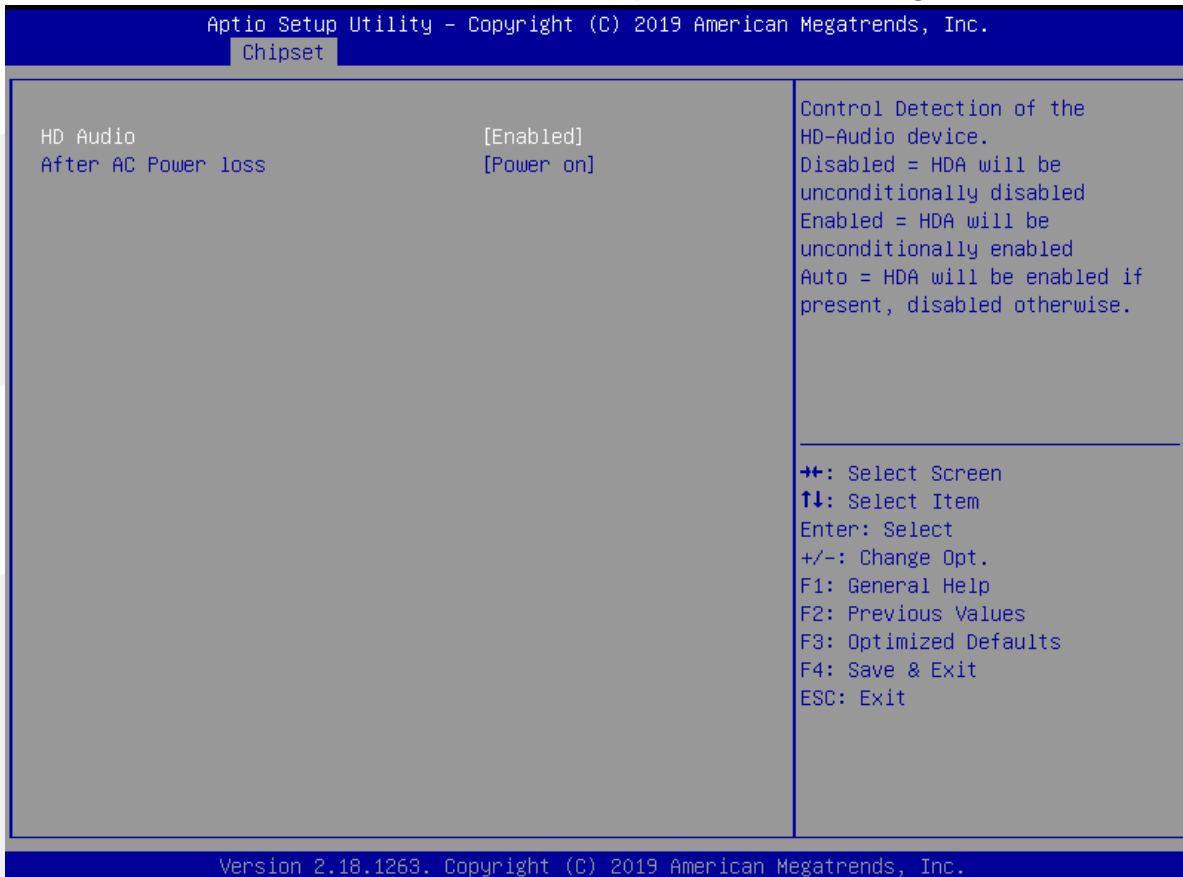

Setup Item	Options	Help Text	Comments
PCH-IO Configuration			
HD Audio	Disabled Enabled	Control Detection of the HD-Audio device. Disabled = HDA will be unconditionally disabled Enabled = HDA will be unconditionally enabled Auto = HDA will be enabled if present, disabled otherwise.	
After AC Power loss	Power off Power on	Select AC power state when power is re-applied after a power failure.	

3.4 Security

To access this screen form the Main screen, choose **Security**.

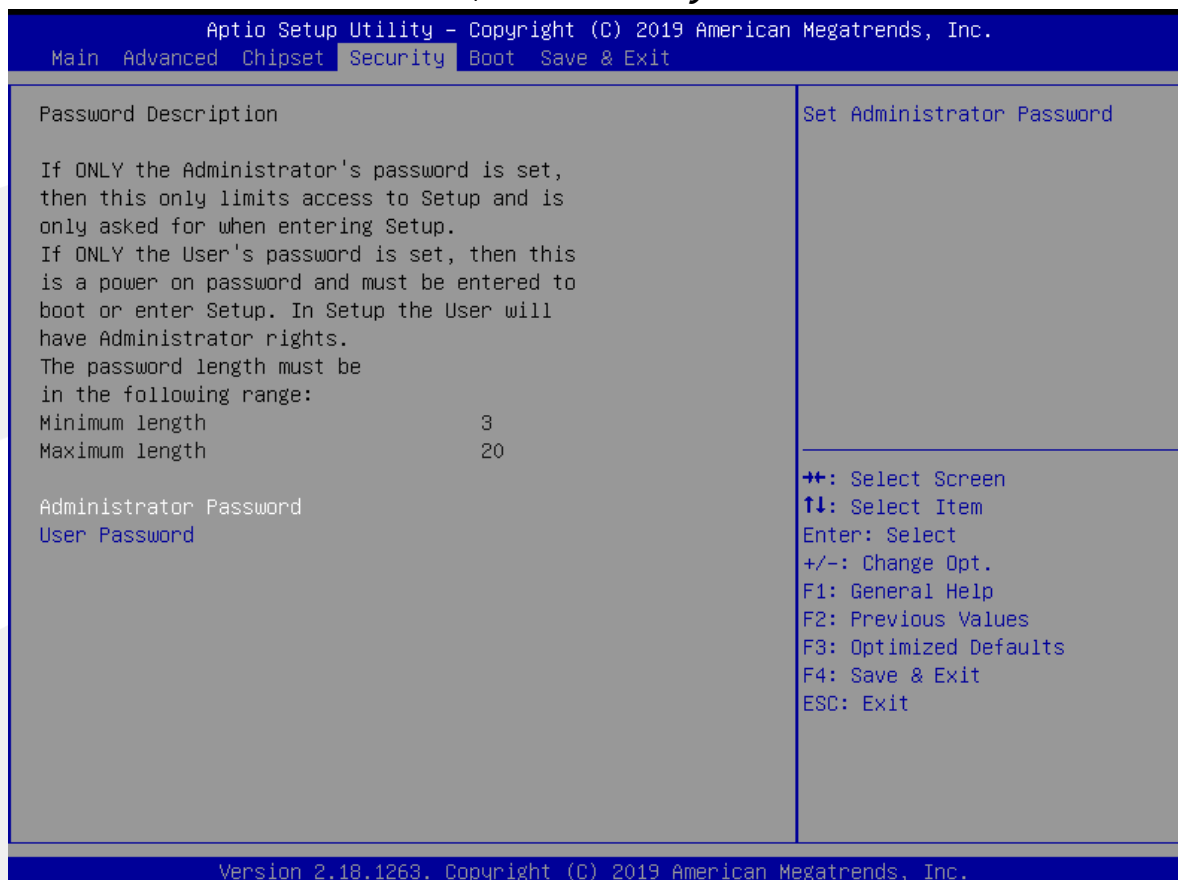


Setup Item	Options	Help Text	Comments
Security			
Administrator Password		Set Administrator Password.	
User Password		Set User Password.	

3.5 Boot Screen

The Boot screen displays any bootable media encountered during POST, and allows the user to configure desired boot device.

To access this screen from the Main screen, choose **Boot**.

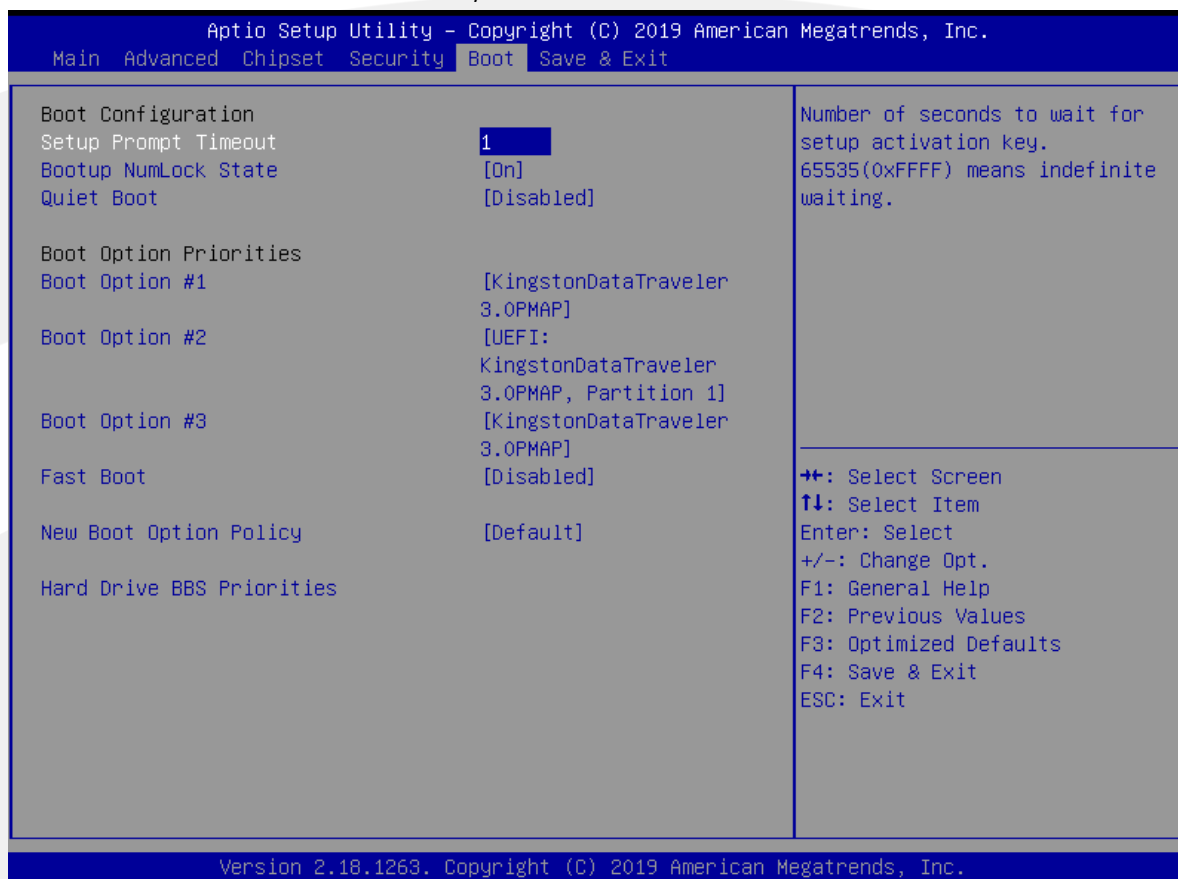

Setup Item	Options	Help Text	Comments
Boot Configuration			
Setup Prompt Timeout	1~65535	Number of seconds to wait for setup activation key.65535(0xFFFF) means indefinite waiting.	Setup Prompt Timeout.
Bootup NumLock State	On off	Select the keyboard Number state.	Bootup NumLock State.
Quiet Boot	Disabled Enabled	Enables or disables Quiet Boot option.	Quiet Boot.

Setup Item	Options	Help Text	Comments
Boot Option Priorities			
Boot Option #1		Sets the system boot order.	Note: Showed When boot devices existed.
Boot Option #2		Sets the system boot order.	
Boot Option #3		Sets the system boot order.	
Fast Boot	Disabled		
New Boot Option Policy	Default		
Hard Drive BBS Priorities		Set the order of the legacy devices in this group.	Set boot order in each group of the same kind, such as HDD, network.

3.6 Save & Exit Screen

The Save & Exit screen allows the user to choose whether to save or discard the configuration changes made on the other screens. It also allows the user to restore the server to the factory defaults or to save or restore them to set of user-defined default values.



Setup Item	Options	Help Text	Comments
Save & Exit			
Save Options			
Save Changes and Exit		Exit system setup after saving the changes.	User is prompted for confirmation only if any of the setup fields were modified.
Discard Changes and Exit		Exit system setup without saving any changes.	
Save Changes and Reset		Reset the system after saving the changes.	
Discard Changes and Reset		Reset system setup without saving and changes.	
Save Changes		Save Changes done so far to any of the setup options.	

Setup Item	Options	Help Text	Comments
Discard Changes		Discard Changes done so far to any or the setup options.	
Default Options			
Restore Defaults		Restore/Load Default values for all the setup options.	
Save as User Defaults		Save the changes done so far as User Defaults.	
Restore User Defaults		Restore the User Defaults to all the setup options.	
Boot Override			
Shows the Device can boot.			Note: Showed When boot devices existed.

第四章 修改记录

版本	修改内容	日期
V0.1	首次发布	2023.6.27
V1.0	删除 DP/HDMI 删除开关按键 更改 USB2.0 插针定义 更改网络插针定义 删除 SIM 卡座	2023.9.8

附录

附一：Watchdog 编程指引

Watchdog 参考代码 (ASM)

我们可以操作端口来实现对看门狗的操作。可以通过对相应端口写数据来操作端口，实现 Watchdog Timer 的不同功能。

```

void main()
intindexp = 0x2e,datap = 0x2f;

outportb(indexp,0x87);

outportb(indexp,0x01);//unlock
outportb(indexp,0x55);
outportb(indexp,0x55);

outportb(indexp,0x07);
outportb(datap,0x07);

outportb(indexp,0x72);
outportb(datap,0xc0);//set second
/*outportb(datap,0x40);set minute*/

outportb(indexp,0x73);
outportb(datap,0x03);//set 3 seconds

outportb(indexp,0x02);
outportb(datap,0x02);//lock
    
```

附二：术语表

ACPI 高级配置和电源管理

ACPI 规范允许操作系统控制计算机及其附加设备的大部份电能。

BIOS 基本输入/输出系统

是在 PC 中包含所有的输入/输出控制代码界面的软件。它在系统启动时进行硬件检测，开始操作系统的运作，在操作系统和硬件之间提供一个界面。BIOS 是存储在一个只读存储器芯片内。

BUS 总线

在计算机系统中，不同部件之间交换数据的通道，是一组硬件线路。我们所指的 BUS 通常是 CPU 和主内存元件内部的局部线路。

Chipset 芯片组

是为执行一个或多个相关功能而设计的集成芯片。我们指的是由南桥和北桥组成的系统级芯片组，他决定了主板的架构和主要功能。

CMOS 互补金属

氧化物半导体。是一种被广泛应用的半导体类型。它具有高速、低功耗的特点。我们指的 CMOS 是在主板上的 CMOS RAM 中预留的一部份空间，用来保存日期、时间、系统信息和系统参数设定信息等。

COM 串口

一种通用的串行通信接口，一般采用标准 DB9 公头接口连接方式。

DIMM 双列直插式内存模块

是一个带有内存芯片组的小电路板。提供 64bit 的内存总线宽度。

DRAM 动态随机存取存储器

是一个普通计算机的通用内存类型。通常用一个晶体管和一个电容来存储一个位。随着技术的发展，DRAM 的类型和规格已经在计算机应用中变得越来越多样化。例如现在常用的就有 SDRAM、DDR SDRAM 和 RDRAM。

L2c

Inter-Integrated Circuit 总线是一种由 PHILIPS 公司开发的两线式串行总线，用于连接微控制器及其外围设备。

LAN 局域网络接口

一个小区域内相互关联的计算机组成的一个计算机网络，一般是在一个企事业单位或一栋建筑物。局域网一般由服务器、工作站、一些通信链接组成，一个终端可以通过电线访问数据和设备的任何地方，许多用户可以共享昂贵的设备和资源。

LED 发光二极管

一种半导体设备，当电流流过时它会被点亮，通常用来把信息非常直观地表示出来，例如表示电源已经导通或硬盘驱动器正在工作等。

PnP 即插即用

允许 PC 对外接设备进行自动配置，不用用户手动操作系统就可以自己工作的一种规格。为实现这个特点，BIOS 支持 PnP 和一个 PnP 扩展卡都是必需的。

POST 上电自检

在启动系统期间，BIOS 会对系统执行一个连续的检测操作，包括检测 RAM，键盘，硬盘驱动器等，看它们是否正确连接和是否正常工作。

PS/2

由 IBM 发展的一种键盘和鼠标连接的接口规范。PS/2 是一个仅有 6PIN 的 DIN 接口，也可以用以连接其他的设备，比如调制解调器。

USB 通用串行总线

一种适合低速外围设备的硬件接口，一般用来连接键盘、鼠标等。一台 PC 最多可以连接 127 个 USB 设备，提供一个 12Mbit/s 的传输带宽；USB 支持热插拔和多数数据流功能即在系统工作时可以插入 USB 设备，系统可以自动识别并让插入的设备正常。

深圳智锐通科技有限公司
Shenzhen Zrt Co., Ltd.



智锐通公众号

&



智锐通抖音号

- 集团总部：深圳市宝安区碧桂园凤凰智谷A栋21楼
 - 北京分公司：北京市昌平区科兴西路106号院2号楼5层
 - 南京分公司：南京市江宁区万科都荟天地B2栋7楼
 - 苏州分公司：苏州市虎丘区港龙城市广场4栋13楼
 - 成都分公司：成都市武侯区世纪百合尚寓3栋10楼
- 400-838-6869